

# Leica DM IRE2 and Leica DM IRB

Instructions



Issued in 2001 by:

Leica Microsystems Wetzlar GmbH Ernst-Leitz-Strasse D-35578 Wetzlar (Germany)


Responsible for contents:

Marketing MQM, product management,

Phone +49(0)6441-292519

Fax +49(0)6441-292255

E-Mail Bernard.Kleine@leica-microsystems.com

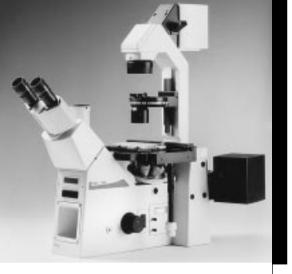

# Leica DM IRE2 and Leica DM IRB

Instructions



## Copyrights

All rights to this documentation and the software it describes are owned by Leica Microsystems Wetzlar GmbH. Copying of text and illustrations – in full or in part – by printing, photostat, microfilm or other techniques, including electronic systems, is only permitted subject to the express written consent of Leica Microsystems Wetzlar GmbH.

The information contained in the following documentation represents the latest stage of technology and knowledge. We have composed the texts and illustrations with great care. However, as it is impossible to eliminate the risk of slip completely, no kind of liability for the correctness of the contents of this manual can be accepted. Nevertheless, we are always grateful to be notified of any errors.

The information in this manual may be altered without prior notice.

### Contents

Important notes on this manual	8	Assembly	19
		Assembly tools	
General safety information		Assembly of the transmitted light	
		illumination column TL	19
Field of application	11	Assembly of condensers	20
approacion		Assembly of IC condenser prisms	23
The microscope and its components	12	Condenser top	24
Key subassemblies	12	Condenser 0.30 S70	24
The stand	14	Condensers 0.53 S23 and 0.90 S1	25
Tube mount	14	Assembly of field diaphragm	26
Tube	14	Assembly of filters and filter holder	26
HC R/IR tube adapter	14	Assembling the ICT objective prisms	27
Eyepieces	15	Assembling the IC module	
Brightness adjustment	15	and IC objective prisms	27
Coarse and fine control	15	Differences between prism D and D1	28
Mains switch	15	Inserting the analyser	28
Incident light fluorescence device	15	Inserting the polariser	
Aperture diaphragm	15	Inserting the fluorescence module	29
Condenser	15	Assembly of the lamphousing mount,	
Condenser height adjustment	15	mirror housing, lamphousing,	
Specimen stages and accessories	15	illumination telescope	29
Objective nosepiece and objectives	16	Assembling and exchanging	
Transmitted light illumination unit	16	incident light lamps	31
Field diaphragm	16	Lamphousing 107 L	31
Lamphousings	16	Lamphousing 106 z L	32
Filters	16	Assembling and exchanging	
		Hg and Xe lamps	33
Installation site	17	Assembly of the tubes	
		and tube adapter HC R/IR	35
Unpacking	18	Adaption of the slide overlay device	
		and the macro dual system	
Installation	18	Inserting the eyepieces	
		Inserting graticules	39
		Inserting the photoeyepieces	
		Screwing objectives in and out	40
		Assembling the stages,	
		the plane stage and object guide	40

The E-Version Leica DM IRE2	43	Front control panel for Leica DM IRE2	
Features of the Leica DMIRE2 The LEICA CTR MIC Electronics Box	43	LC display Fluorescence filter cube change	
The x/y/z control	44 44	Viewing ports	
Cabling	45	Change of tube optics	
Start-up using the LCD control panel	46	change of tube optics	02
Learn mode	47	Software operation for Leica DM IRE2	62
Installing the objective prisms	47	Installing the software	
Learning the IC objective prisms	47	The microscope configuration program	64
Installing the objectives	48	The Microscope Assistant	66
Parfocality	50	Downloading a firmware update	68
Dry objectives	50	Version numbers	
Oil immersion objectives	50	version numbers	UU
Exiting the Learn mode	51	Operation of imaging and	
Individual user settings	51	contrasting techniques	69
Installing the fluorescence filter cube	52	contrasting teeriniques	0,
Concluding the installation	52	Basic setting for transmitted light	71
Operation	53	Operation of objectives	78
Motorized objective nosepiece		Operation of transmitted light	79
for Leica DM IRE2	53		
		Operation of phase contrast	82
Operation modes for Leica DM IRE2	54		
DRY and IMMERSION	54	Operation of transmitted light darkfield	84
Changing the operating mode	54		
Automatic lowering		Operation of	
of the objective nosepiece	55	transmitted light polarisation	85
Brightness adjustment for Leica DM IRE2	56	Operation	
		of transmitted light interference contrast	86
Electronic focus for Leica DM IRE2	57		
		Operation of	
Mot. fluorescence filter cube change		incident light fluorescence	89
for Leica DM IRB	59		
		Operation of filters	96
Mot. fluorescence filter cube change			
for Leica DM IRE2	60	Operation of the slide overlay device	97
		Operation of the macro device	98

Operation of LMC	105
Principle of LMC	106
Components	
Assembly/adjustment	108
Areas of application	11(
Care and maintenance	111
Troubleshooting	113
Storage	120
Packaging and transport	120
Performance parameters	
Objectives	
Eyepieces	
Filters	
Tubes	
Condensers	
Stages and mountable object guides	
Incident light fluorescence illumination	
Lamphousings	131
General technical data	133
Main wearing and spare parts, tools	134
EU Declaration of Conformity	135

### Important notes on this manual

This manual is an integral part of the Leica DM IRB and Leica DM IRE2 microscopes and must be read carefully before you start using the microscope.

This manual contains important instructions and information on the operating safety and maintenance of the system. It must therefore be kept in a safe place.

The manual is multi-lingual. Due to the spiral binding you can turn the language version you want to the front.

The DM IR is available both as a life sciences microscope and as a metallographic/industrial microscope. In cases where the function and operation are identical, the same text and illustrations are used in both the separate instruction manuals.

#### Text symbols and their meaning:

(1.2)

 $\rightarrow$  P.20









Numbers in brackets, e.g. (1.2) refer to illustrations, in this example Fig. 1, item 2.

Numbers with an arrow, e.g.  $\rightarrow$ p. 20 refer to a particular page in this manual.

Special safety information is indicated by the triangular symbol on the left and is given a grey background.

Caution! Operation errors can damage the microscope and/or its accessories.

Warning of hot surface.

Explanatory note.

Not part of all configurations.

## General safety information

This instrument of safety class 1 has been built and tested according to EN 61 010-1/IEC 1010-1/VDE 0411-1, safety standards for electrical measurement, control and laboratory equipment.

Make sure that only fuses of the specified type and rating are used as replacements. It is forbidden to use mended fuses or to short-circuit the fuse holder.



#### Attention:

To keep the microscope in this safe condition, it is essential to note the advice and warnings given in this manual.

The mains plug must only be inserted into a grounded outlet.

If an extension cord is used, it must be grounded as well. Any interruption of the ground connector inside or outside the microscope or disconnecting the ground connector can make the microscope potentially dangerous. Intentional interruption is forbidden!



#### Attention:

Using the ground connection, any accessories connected to the microscope which have their own and/or a different power supply can be given the same ground conductor potential. Please consult our servicing personnel if you intend to connect units without a ground conductor.



#### Attention:

The instruments and accessories described in this manual have been safety-tested and checked for possible hazards.

Before modifying the instrument in any way or combining it with non-Leica products not dealt with in this manual, it is essential to consult the Leica agency for your area or the main factory in Wetzlar!

Any unauthorized alteration to the microscope or use for which it was not intended will automatically terminate any warranty claim.



#### Attention:

The electric accessories of the microscope are not waterproof. If water gets inside them, it may cause electrical shock.

Do not put the microscope and its accessories too near a water supply or anywhere else where water may get inside them.



#### Attention:

Before changing fuses or lamps, always turn the mains switch off and disconnect the mains cable.



#### Attention:

Protect the microscope from major temperature fluctuations. These may lead to condensation which can damage the electric and optical components.



#### Attention:

Avoid skin contact when using immersion oil! Ask the supplier for a safety information sheet!

## Field of application

The Leica DM IRB respectively the Leica DM IRE2 is the logical further development of the successful inverted research microscope from Leica. It is used for examinations of cells and tissue, for micromanipulation and microinjection tech-niques all the way through microdissection or confocal microscopy. The Leica DM IRB or Leica DM IRE2 has universal application potential, incorporating all the contrasting techniques of brightfield, darkfield, contrast. DIC. fluorescence Hoffmann modulation contrast, which are all easy to use and switch between. Variable illumination and imaging light paths, HCS optics, modular accessories and a wide range of peripherals make the large Leica DM IRB or Leica DM IRE2 research microscope a versatile and powerful product.

### The microscope and its components

#### Key subassemblies

The following views of the whole microscope show and name important subassemblies of the microscope and its accessories.

#### Fig. 1 a,b Leica DM IRB

1 Binocular phototube, 2 Eyepiece adapter tube, 3 Eyepieces, 4 Tube mount (tube change interface), 5 Tube port for photo/TV connection, 6 Beamsplitter switch eyepiece/photo/TV exit, 7 Mains switch, 8 Brightness adjustment, 9 Lateral TV port, 10 Coaxial coarse and fine drive, 11 Fluorescence module, 12 ICT prism adjustment, 13 Sextuple objective nosepiece, 14 Centring buttons for incident light field diaphragm, 15 Field diaphragm adjustment, 16 Filters (up to 3 filters e.g. DLF, ALF), 17 Aperture diaphragm adjustment, 18 Lamphousing mount (or mirrorhousing for two lamphousings), 19 Lamphousing, 20 Stage plate, 21 Analyser, 22 Tube lens module (Bertrand lens and magnification changer), 23 Switch rod for lateral TV port, 24 Transmitted light illumination column, 25 Condenser, 26 Transmitted light lamphousing, 27 Transmitted light field diaphragm, 28 SLR port, 29 Second lamphousing

Fig. 1a View from the right Leica DM IRB


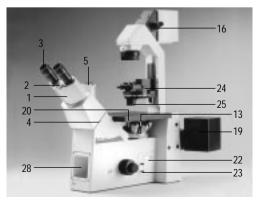


Fig. 1b View from the left Leica DM IRB

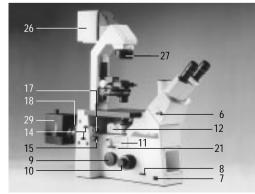

#### Fig. 2 a,b Leica DM IRE2

1 Electronics box Leica CRT MIC, 2 RF4 module, 3 Coded IC objective prism disk, 4 Objective change keys (with "individual user settings"  $\rightarrow$  p. 51 the objective change keys can be switched to the focus keys on the right side of the microscope), 5 Focus handwheel, 6 Separate control for focusing, 7 Focus keys (with "individual user settings"  $\rightarrow$  p. 51 the focus keys can be switched to the objective change keys on the left side of the microscope), 8 Motorized Tube lens changer inclusive Bertrandlens, 9 Window for lamp adjustment

Fig. 2 a View from the left Leica DM IRE2


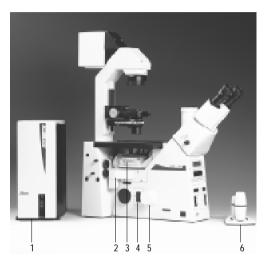


Fig. 2 b View from the right Leica DM IRE2



Fig. 2 c Front control panel Leica DM IRE2

10 Push-buttons and diode display of the RF4 module,
11 Control panel "Ports", 12 Front control panel with LC
display, 13 Key for shutter control, 14 Push-buttons for
magnification changer

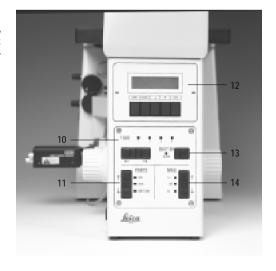

#### The stand

There are 5 basic versions of the Leica DM IRB or leica DM IRE2 stand, which allow over 50 microscope variants to be configured.

These 5 basic versions are:

- · Manual or electronic stand
- · With or without integrated fluorescence axis
- With or without SLR front port or bottom port
- Lateral photo port 100 % or 80 %
- With or without integrated magnification changer

The variants and their components, differences and uses will be explained individually in this manual. The function and operation of all microscopy techniques and the necessary accessories for the Leica DM IRB and Leica DM IRE2 will be described and explained in detail in the Operation section of this manual.

#### First of all, here is a general overview:

#### Stands

The **basic stand** has a photo port on the left for the adaption of: TV camera, SLR camera or photomicro system. The variants offered send either 100% or 80% of the light to this photo port.

Besides the lateral photo port, the **SLR stand** also has another port facing the front (front port\*) which can be equipped with either an SLR camera or a TV camera with c-mount connection.

The **stand with bottom port** cannot be equipped with an SLR front port. This variant is only produced at a customer's specific request.

The **electronic stand** additionally offers a motorised objective nosepiece, electronic focusing, IC objective prism coding, LCD display of microscope functions and (optional) motorised filter cube changer (RF4-mot module) with electric dark flap, control panel, etc. All the above-mentioned stands are also available as **fluorescence stands** with integrated fluorescence axis. All the fluorescence stands (including the manual versions) can be fitted with the RF4-mot module.

#### Tube mount

The interface between the stand and the tube is called tube mount or tube change interface.

The tube mount is compatible with DM IR tubes and the HC R/IR tube adapter which allows the use of DM R tubes.

#### **Tube**

The tube, or its tube lens, produces the primary image together with the objective.

DM IR tubes consist of a basic part, the binocular part and the tube change ring. The trinocular tube also has a photo/TV port. A switchable mirror either directs the light 100 % to the eyepieces or 100 % to the photo port, or splits it 50 %/50 %.

Performance data of the tubes  $\rightarrow$  p. 127 ff.

#### HC R/IR tube adapter

The tube adapter is used to adapt tubes from the DM R range.

#### **Eyepieces**

A magnified, virtual image of the actual intermediate image produced by the objective is produced with the eyepieces. They act as a magnifier.

Performance data of the eyepieces  $\rightarrow$  p. 124 ff.

#### Brightness adjustment

A 12 V 100 W transformer is built into the stand for stepless regulation of brightness with the brightness control.

With the electronic version Leica DM IRE2 the brightness can be adjusted with the separate x/y/z control.

#### Coarse and fine control

The coarse and fine focus control allows fast and precise focusing of the microscope image. Focusing is done by a vertical movement of the objective nosepiece. The vertical movement range is 9 mm.

With the electronic variant Leica DM IRE2 the separate x/y/z control can be used for focusing.

#### Mains switch

The mains switch is used for switching the microscope power supply on and off.

#### Incident light fluorescence device

The variant with incident light fluorescence device contains the integrated fluorescence axis. The fluorescence stand also comprises the fluorescence module which takes 4 filter cubes. This module is also available as a motorised variant under the name RF4-mot module.

#### Aperture diaphragm

The aperture diaphragm determines the resolution, field depth and contrast of the microscope image. The best resolution is achieved when the apertures of the objectives and the condenser are roughly the same.



#### Attention:

The aperture diaphragm in the **illumination light path** is not intended for adjusting the brightness of the image. This should only be done by using the controls for lamp adjustment or the neutral light damping filter.

#### Condenser

The condenser is a lens system through which the light is collected and focused on the specimen underneath. The condenser is designed to utilise the numerical aperture of the objective.

#### Condenser height adjustment

The markings on the transmitted light illumination column indicate the height settings of the different condensers.

#### Specimen stages and accessories

The specimen stage supports the specimens that are to be examined through the microscope. Several options are available to accommodate the wide variety of specimens examined, such as object guides, extension plates, specimen clips, scanning stage, heating stage, etc.

#### Objective nosepiece and objectives

The objective nosepiece is used to hold the objectives. L objectives with long working distances, for example, are specially corrected to respect different thicknesses of vessel bases. All microscope objectives from magnification 1.6x to 100x can be used. All objectives from the DML and DMR range with 25 mm thread are compatible. The performance data of Leica objectives can be found in the chapter "Performance Data" → p. 121ff or on the relevant objective lists available from your Leica agency.

#### Transmitted light illumination unit

The transmitted light illumination unit consists of the lamphousing and the transmitted light illumination column. The transmitted light lamphousing comprises a precentred 12 V 100 W halogen lamp and a filter module for three swing-in filters.

#### Field diaphragm

The field diaphragm is used to produce Koehler illumination.

#### Lamphousings

A variety of lamphousings are offered for the Leica DM IRB and Leica DM IRE2 (for halogen, mercury or xenon lamps). The description and area of application can be found in the operation section of this manual.

#### **Filters**

Filters are generally used to enhance the contrast of the specimen and are assembled in the illumination column. A variety of different filters are easily changed.

### Installation site

The microscope should be used in a dust-free room which is free of oil and chemical fumes and extreme humidity. Also, the workplace should not be exposed to major temperature fluctuations, direct sunlight or vibrations. These may impair measurements or photographs of the microscope image.

#### Ambient conditions:

Temperature 10–36 °C

Relative humidity 0-80% up to 30°C

Microscopes in warm and humid climates need special care to prevent build-up of fungus. Further details are given in the chapters "Care and maintenance"  $\rightarrow$  p. 111 and "Storage"  $\rightarrow$  p. 120.



#### Attention:

Lamphousings\* and power units\* must be placed at least 10 cm away from the wall and from flammable objects.

## Unpacking

Please compare the delivery carefully with the packing note, delivery note or invoice. We strongly recommend that you keep a copy of these documents with the manual, so that you have information on the time and scope of the delivery later when ordering more equipment or when the microscope is serviced. Make sure that no small parts are left in the packing material. Some of our packing material has symbols indicating environment-friendly recycling.



n.b.:

Keep the packing material for storage and transport of the microscope and its accessories.



#### Attention:

Try to avoid touching the lens surfaces of the optics. Any fingermarks on the glass surfaces should be removed with a soft leather or linen cloth. Even small amounts of finger perspiration can attack the surfaces of optical instruments within a short time. Further information is given in the Maintenance and Cleaning chapters  $\rightarrow$  p. 111.

### Installation

- First take all the components out of the transport and packing material.
- Put the basic Leica DM IRB or Leica DM IRE2 stand on a desk which has enough room for it.



#### Attention:

On no account should the microscope be connected to the power socket yet!

## Assembly

#### Assembly tools

Installation and assembly of the microscope should preferably be carried out together with a member of Leica sales or service staff.

Only a few ordinary screwdrivers are required for assembly, and these are supplied with the microscope (3).


### Assembly of the transmitted light illumination column TL

Wipe off the interface surface (4.3) with a dry cloth. Tilt the illumination column (4.1) slightly to the back and insert so that the pin (4.2) engages in the groove of the interface surface (4.4).

Erect the TL illumination column and secure with the 4 screws.

When screwing on the TL illumination column, do not hold onto it so that optimal alignment to the optical axis is guaranteed. The angle of tilt of the illumination column can be varied or clamped securely in the vertical position with the knurled screw (5.1).

Fig. 3 Assembly tools
1 Cross-tip screwdriver\*, 2 Hexagonal screwdriver, 3 mm,
3 Centring keys, 2 mm\*, 4 Centring keys, 1.5 mm\*, 5 Allen key,
3 mm\*, 6 Allen key, 2.5 mm\* (short version)

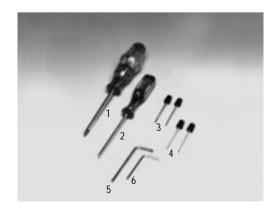

The lamphousing for transmitted light illumination for 12 V 100 W halogen lamps with single-lens aspherical collector and heat protection filter is an integral part of the transmitted light illumination column. The halogen lamp is preassembled. The chapter on Troubleshooting includes a description of how to assemble and change halogen lamps  $\rightarrow$  p. 31ff.

The cable on the illumination column can then be connected to the 12 V 100 W socket on the back of the microscope stand.

#### Assembly of condensers

The technical description of the condensers can be found in the chapter "Performance data"  $\rightarrow$  p. 121ff.

All condensers of the Leica DM IRB and Leica DM IRE2 are equipped with a 6-position rotating disc (6.2 and 8.3) and can be individually fitted with the corresponding annular diaphragms for phase contrast (PH), darkfield (DF) or IC prisms for TL interference contrast (ICT) (10).

Usually the annular diaphragms are already inserted in the condenser disc in the factory, so you will not normally have to fit them yourself. The condenser disc (11.5) is removed from the condenser by slackening the screw (11.4) on the underneath of the condenser.

Fig. 4 Assembly of transmitted light illumination column

1 Transmitted light illumination column, 2 Pin of TL illumination column, 3 Support surface, 4 Groove of support surface, 5 Drill holes for fixing screws

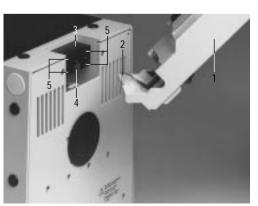


Fig. 5 Transmitted light illumination column, back view
1 Knurled screw for clamping the transmitted light illumination column



Insert the light rings for Phaco (identified by the code numbers 0, 1, 2, 3 and the intercept distance S of the corresponding condenser top, e. g. 2 S1) and the DF diaphragm (identified by D for darkfield and the intercept distance S of the corresponding condenser top, e.g. D S1, see table  $\rightarrow$  p. 129) in the slots of the disc as follows:

- Slightly unscrew the two centring screws (10.11) using the supplied centring key (12.1).
- Insert the diaphragms so that the mount fits under the spring (10.3) of the slot.
- When the light rings are assembled, their identification code must be visible i.e. pointing upwards (12.3, 12.4 and 12.5).
- Insert the light rings in the order 0, 1, 2, 3. The DF diaphragm can only be inserted in a large hole.
- Using the centring keys, screw the centring screws back in until they no longer protrude over the outer edge of the disc.

- Fit IC condenser prisms if appropriate (see assembly of ICT objective prisms → p. 27).
- Insert the plastic labels (10.7) in the disc (12.2), allocating them to the corresponding diaphragms.
- · Mark any empty holes with white labels.

Insert the disc into the condenser with notches (10.6) facing upwards – towards the aperture diaphragm (6.3 and 8.4) – and screw down (11.4).

Fig. 6 Condenser 0.30 S70

1 Condenser top 0.30 S70 (not for use with condenser base (8.1)), 2 Condenser disc, 3 Aperture diaphragm, 4 Filter holder, 5 Condenser clamp screw, 6 Condenser base

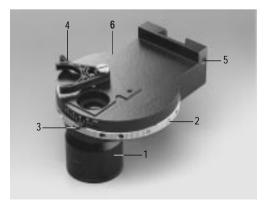
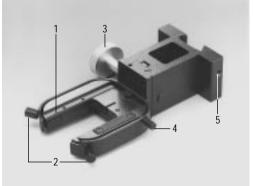


Fig. 7 Condenser holder

- 1 Condenser slide changer, 2 Condenser centring screws,
- 3 Condenser height adjustment, 4 Condenser clamp screw,
- 5 Screw for clamping the condenser holder



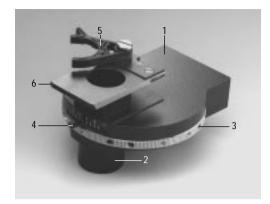


Fig. 8 Condenser 0.53 S23

1 Condenser base, 2 Condenser top 0.53 S23 (interchangeable), 3 Condenser disc, 4 Aperture diaphragm, 5 Filter holder, 6 Dovetail guide



Fig. 9 Condenser tops for condenser base (8.1)
1 Condenser top 0.53 S23, 2 Condenser top 0.90 S1,
3 Condenser top P 1.40 OIL S1, 4 Spacer ring for assembling 9.2 and 9.3

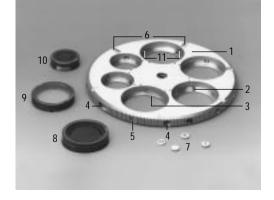


Fig. 10 6-position condenser disc, empty

1 Condenser disc with slots for light rings and IC condenser prisms, 2 Guide groove for IC condenser prisms ( $2^{nd}$  groove is concealed, 3 Spring, 4 Holes for centring keys, 5 Spaces for label plates, 6 Notches, 7 Label plates, 8 Light ring for darkfield, 9 IC condenser prism with 2 guide cams, 10 Light ring for phase contrast, 11 Centring screws

#### Assembly of IC condenser prisms

The IC condenser prisms are assembled at the factory. The following steps are only necessary in case of a retrofit:

Remove the condenser disc (11.5) by slackening the screw (11.4) on the underneath of the condenser.

- Using the centring keys (12.1), slightly unscrew the two centring screws (10.11).
- IC condenser prisms can only be inserted into the large holes of the condenser disc which have guide grooves (10.2).
- Insert the IC condenser prisms in ascending order, e.g. K1, K2 and so that the mount fits under the spring (10.3) in the slot and the 2 guide cams engage in the grooves of the condenser disc (10.2).

- When the prisms are inserted, their identification code, e.g. K10, must be visible and pointing towards the <u>centre of the disc</u> (12.6 and 12.7).
- Using the centring keys, screw the centring screws back in until they no longer protrude over the outer edge of the disc. The prism is adjusted with the left centring screw only (see operation of ICT). The right centring screw must never restrict the adjustment range.
- Assemble the light rings and DF diaphragm if appropriate (see previous section).
- Insert the label plates (10.7) corresponding to the relevant IC condenser prism.
- Mark any empty holes with white labels.
- Remove any finger marks or dust on the prisms carefully.
- Put the condenser disc back in the condenser with the notches (10.6) facing upwards – towards the aperture diaphragm (6.3 and 8.4).
   Screw down the disc (11.4).

Fig. 11 Condenser 0.90 S1 (bottom up)
1 Condenser base, 2 Condenser top 0.90 S1, 3 Spacer ring,
4 Fixing screw for condenser disc, 5 Condenser disc

3 2 1 4

Fig. 12 6-position condenser disc, fully equipped 1 Centring keys for centring screws (in working position), 2 Label plates, 3, 4 Light rings for phase contrast, 5 Light ring for darkfield, 6, 7 IC condenser prisms, 8 Hole for brightfield



#### Condenser top

A special base and the top of condenser 0.30 S70 form a self-contained unit (Fig. 6).

The condenser top 0.30 S70 (13.4) cannot be used with the general condenser base (8.1).

The condenser top 0.53 S23 (8.2 and 9.1) is screwed straight on to the condenser base (8.1). A spacer ring (9.4 and 11.3) must be used for assembling the condenser tops 0.90 S1 and P 1.40 OIL S1 (9.2 and 9.3).

### Assembly of the condensers to the illumination column

#### Condenser 0.30 S70

Tilt the TL illumination column to the back (13.1). Insert the condenser 0.30 S70 (13.4) from below into the dovetail guide of the illumination column (13.2), with the condenser top pointing towards the microscope stage. Adjust the height of the condenser until its upper edge is flush with the condenser height marking S70 on the illumination column. Secure the condenser with the supplied hexagonal screwdriver. Erect the TL illumination column

Fig. 13 Assembly of condenser 0.30 S70

1 Transmitted light illumination column (tilted), 2 Dovetail guide, 3 Condenser height markings S1, S23 and S70, 4 Condenser 0.30 S70, 5 Condenser clamp screw, 6 Field diaphragm clamp screw, 7 Transmitted light lamphousing

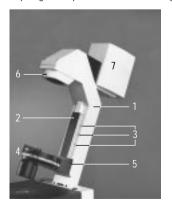


Fig. 14 Assembly of condenser 0.30 S70

1 Condenser 0.30 S70 in working position (upper edge of condenser is flush with condenser height marking S70)



#### Condensers 0.53 S23 and 0.90 S1

With the illumination column tilted to the back. insert the condenser holder (15.4) into the dovetail guide of the illumination column from below (15.2). The condenser height adjustment should point to the left. Adjust the height of the condenser holder until its upper edge coincides with the condenser height marking S23 or S1 on the illumination column (16.1), depending on the condenser top used. Secure the condenser holder with the hexagonal screwdriver and clamp screw (15.5). Mount the base part of the condenser with the dovetail guide (8.6) to the slide change mechanism (7.1) of the condenser holder (17). The condenser top should point downwards and the aperture diaphragm control towards the front (17.3). Slacken the clamp screw (17.5) and push the condenser back as far as the stop. Retighten the clamp screw (17.5) slightly.

**Fig. 16** Assembly of condenser holder

1 Condenser holder in working position for condenser
0.53 S23 (upper edge of condenser holder coincides with condenser height marking S23)

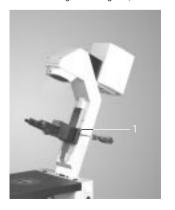


Fig. 15 Assembly of condenser holder

1 Transmitted light illumination column, 2 Dovetail guide, 3 Condenser height markings S1, S23 and S70, 4 Condenser holder, 5 Clamp screw for securing the condenser holder, 6 Clamp screw for field diaphragm module, 7 Transmitted light lamphousing


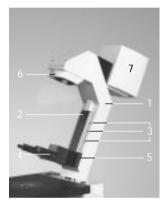


Fig. 17 Assembly of 0.53 S23 condenser

1 Dovetail guide of the condenser, 2 Sliding condenser changer, 3 Aperture diaphragm adjustment, 4 Condenser top 0.53 S23, 5 Condenser clamp screw

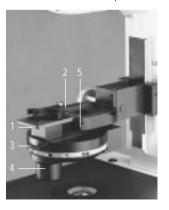

#### Assembly of field diaphragm

To enable Koehler illumination when using condensers 0.53 S23 and 0.90 S1, a field diaphragm has to be assembled. Insert the field diaphragm module (18.1) into the mount (Fig. 18.4) from below. The diaphragm adjustment (18.2) should point in the direction of the tube. Secure with clamp screw (18.3).

Fig. 18 Assembly of field diaphragm

- 1 Field diaphragm module, 2 Field diaphragm adjustment,
- 3 Clamp screw for securing the field diaphragm module,
- 4 Mount

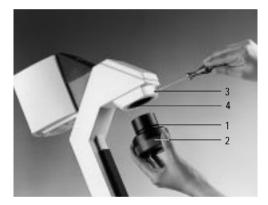


Fig. 19 Assembly of filters

1 Clamp screw for securing the filter holder




#### Assembly of filters and filter holder

The Leica DM IRB and Leica DM IRE2 are equipped with a holder with spaces for 3 filters with 40 mm diameter.

The filters are already fitted into the holder at the factory. If you are retrofitting filters yourself, assemble as follows:

- Slacken the clamp screws (Fig. 19.1) and remove the filter holder.
- Put the filters into the holder (20).
- Mount the filter holder onto the TL illumination column and secure in position with the clamp screws.

Fig. 20 Assembly of filter holder for 3 filters

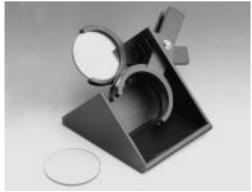

#### Assembling the ICT objective prisms


### Assembling the IC module and IC objective prisms

The IC prism disc with the IC prisms ordered by the customer are already assembled in the microscope at the factory. In case you want to retrofit the IC prism disc, please proceed as follows:

Fig. 21 IC objective prism disc without fixing knurl 1 IC objective prism in mount, 2 Code letter (e. g. A), 3 Washer and screw, 4 Stop pin



Fig. 22 Assembly of IC objective prism module 1 IC objective prism module, 2 Cover, 3 Fixing screw, 4 Hole for fixing screws, 5 Label plates

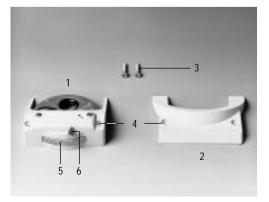

Remove the front cover (22.2) under the objective nosepiece (23.1) after slackening the Allen screws (22.4).

Insert the IC prism disc (22.1) in the mount and tighten with the two Allen screws. n.b.: insert the prism disc with the prism mount pointing downwards.

#### Retrofitting individual IC prisms:

Please align prisms against the stop pin (21.4) and only screw down lightly to avoid strain. Insert the prisms so that the code letter, e.g. A points upwards and is readable.


Label the position of the prism on the front of the ICR prism disc with a label plate (22.5).

#### Examples of prisms:

Prism A – for objectives N PLAN 5x, 10x.

Prisms D and D1 – both for objectives N PLAN 20x, 50x, 100x and HC PL FLUOTAR 5x – 100x.

Fig. 23 Assembly of IC objective prism module 1 Objective nosepiece, 2 Mount for IC objective prism module, 3 Stop pins

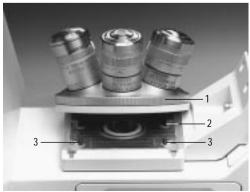

#### Differences between prism D and D1

Prism D is the standard prism with greater shearing and therefore higher detection sensitivity for minute topological and refractive index variations in the specimen. Prism D1 has smaller shearing than prism D.

However, prism D1 is better at resolving details of fine specimen structures.

#### Inserting the analyser

Remove the blind slide ( $\rightarrow$  p.12, Abb. 1b.21) and insert the analyser (24.2) from the left as far as the 1st clickstop.

#### Inserting the polariser

The polariser is inserted into the filter holder of the condenser. In addition a whole-wave compensator is applied to the back of the polariser. It is activated by turning the polariser over, in order to enable colour contrasting in polarisation or interference contrast (the compensator is active when the lambda symbol  $\lambda$  is visible from above).

Fig. 24 Polariser/analyser
1 Polariser POL ↓, 2 Analyser ICT ↔

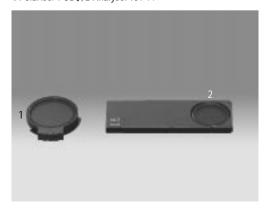


Fig. 25 Condenser 0.53 S23 1 Filter holder with polariser inserted (swung out)



#### Inserting the fluorescence module

The fluorescence module (Fig. 26) is part of the fluorescence stand, but is also available as a retrofit kit. To retrofit the fluorescence module. remove the blind cover from the stand. The fluorescence module can be fitted with up to four different filter cubes (26.3). They are inserted into the dovetail mount (26.2) of the fluorescence module with their engraving facing downwards (towards the turret plate). The fluorescence module is inserted on a dovetail quide into its slot on the stand by pushing it as far as the stop. One part of the fluorescence module is the anti-glare protection (27.1), which can be inserted between the tube and the stage. Proceed in the same way if you are inserting a motorised filter cube changer instead of the manual filter module. Also read the manual for the electronic version.

### Assembly of the lamphousing mount, mirror housing, lamphousing, illumination telescope

- 1. Insert the lamphousing mount or mirror housing in the back panel and screw down with Allen screws. Engage the guide pin of the lamphousing mount (29.1) in the back panel of the microscope stand (28.2).
- 2. Hold the lamphousings 107/2, 107, 106 z against the lamphousing mount and secure with the fixing screw (Fig. 31).
- 3. We recommend using the illumination telescope for gas discharge lamps. This is inserted between the lamphousing mount and the lamphousing 106 z (30.4) and magnifies the image of the focal point of the lamp by the factor 2x in the entrance pupil of the objective. This results in a significantly higher illumination intensity for fluorescence.

Fig. 26 Fluorescence module

1 Rotatable turret, 2 Dovetail mounts for filter cubes (the numbers 1-4 are markings of the assembly positions), 3 Filter cubes, 4 Display of the position in the light path, 5 Switch rod with BG 38 and light stop

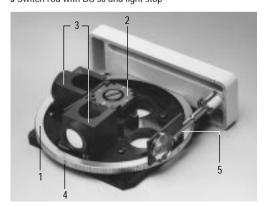


Fig. 27 Anti-glare protection



- 4. Connect the lamp plug to the connecting socket in the stand (28.3).
- 5. Insert light filters, 50 mm Ø into the 2 spaces in the lamphousing mounts (29.4).



Connect the appliance cable to the mains socket on the microscope stand (28.4)!

Fig. 28 Back view of Leica DM IRB

1 Space for assembling a lamphousing mount or mirror housing, 2 Hole for guide pin, 3 Socket for lamp plug, 4 Mains socket, 5 Potential equalisation  $\begin{array}{c} 1 & \text{Mains} \\ 1 & \text{Mains} \\ 2 & \text{Mains} \\ 3 & \text{Mains} \\ 3 & \text{Mains} \\ 3 & \text{Mains} \\ 4 & \text{Mains} \\ 3 & \text{Mains} \\ 4 & \text{Mains} \\ 3 & \text{Mains} \\ 4 & \text{Mains} \\ 5 & \text{Mains} \\ 6 & \text{Mains} \\ 7 & \text{Mains} \\ 8 & \text{Mains} \\ 9 & \text{Mains} \\$ 

Similar for Leica DM IRE2

Fig. 29 Lamphousing mount

1 Guide pin, 2 Lateral lamphousing mount, 3 Dovetail ring for mounting to stand, 4 2 spaces for light filters, 5 Allen screws for fixing



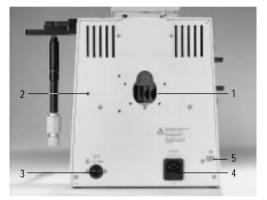




Fig. 30 Mirror housing and illumination telescope 1 Lever for mirror switching, 2 Lateral lamphousing mount with fixing screw, 3 Back lamphousing mount with Allen screw, 4 Illumination telescope for gas discharge lamps

Fig. 31 Lamphousing 106 z L 1 Collector adjustment, 2 Vertical lamp adjustment, 3 Horizontal lamp adjustment, 4 Mount ring

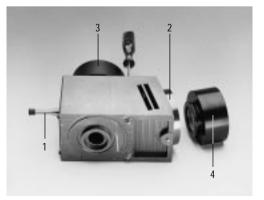

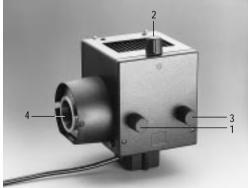

### Assembling and exchanging incident light lamps

#### Exchanging the 12 V 100 W halogen lamp:



#### Attention:

Disconnect the lamp and lamphousing from the power supply. Pull out the mains plug.

#### Lamphousing 107 L

Slacken the fixing screw on the cover and lift off the cover (Fig. 32a and 32b). Move the collector to the front and pull the defect 12 V 100 W lamp out of the base towards the front. Without removing its protective cover, put a new lamp into the base, without tilting, as far as it will go.



#### Attention:


Leave the protective cover on the lamp until it is in position.

Avoid making finger marks or wipe off immediately. Close the lamphousing.

Fig. 32a-c Lamphousing 107 L 1 Mount with halogen lamp, 2 Collector





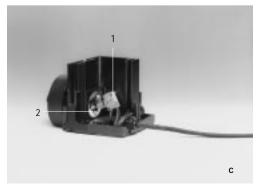

#### Lamphousing 106 z L

Slacken the fixing screw on the lid (33.10). Pull the cut-out plug slightly out of the socket and flip up lid (33.11: 33.1).

Move the collector to the front and lift the defect lamp out of the base (33.1; 33.2; 33.3). For convenience, the lamp holder can be removed from the lamphousing as well. To do this, slacken the fixing screws on the lamp holder (33.10) and pull out lamp holder (Fig. 34).

Without removing its protective cover, put a new lamp into the base, without tilting, as far as it will go.



#### Attention:

It is important to leave the protective cover on the lamp until it is in position.

Avoid making finger marks or wipe off immediately. Close the lamphousing.

Fig. 33 Lamphousing 106 z L 1 Lid, flipped up, 2 Collector, 3 12 V 100 W halogen lamp or gas

discharge lamp in holder, 4, 9 Cover fixing screws, 5 Reflector, 6, 7, 8 x-y adjustment screw for reflector, 10 Fixing screws for lamp mount, 11 Socket for contact plug

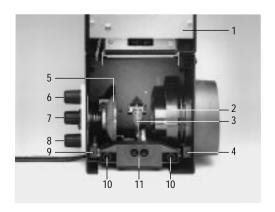


Fig. 34 12 V 100 W lamp holder with halogen lamp



### Assembling and exchanging incident light lamps

## Assembling and exchanging Hg and Xe lamps Power units:

Hg and Xe lamps are powered by separate power units.

Please make sure to read the special manuals for these power units.


#### Lamphousing 106 z L

Besides the halogen lamp, the following gas discharge lamps can be used, which each require different lamp holders (Fig. 35) and power units:


Туре	Average life	span
Hg ultra high pressure lamp		100 h
J 1	75 W (D.C. stabilised) 100 W (D.C. stabilised/non-stabilised)	400 h 200 h
	100 W (D.C. stabilised/non-stabilised,	
	type 103 W/2)	300 h

Fig. 35 a-d Lamp holders for gas discharge lamps

1 Upper clamp, 2 Seal point of the burner, 3 Lower clamp, 4, 6 Lamp holder screws, 5 Socket for cut-out plug, 7 Protective cover

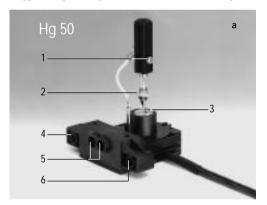



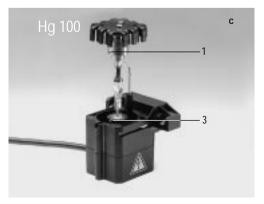





#### Attention:

### It is extremely important to heed the following advice!

Always disconnect the power unit from the mains before assembling the lamphousing 106 z.

Wait for the lamphousing to cool down for at least 15 minutes as otherwise it may explode. Never touch glass parts of the burner with your bare hands as finger perspiration burns in

Wipe off any finger perspiration and dirt with a clean cloth.

Adjust the lamps immediately after ignition. Never look directly into the light path (risk of glare).

Always wear the supplied gloves and face mask when assembling Xe burners (risk of explosion).

Avoid switching on and off frequently, as this greatly reduces the life of the lamp.

Do not ignite hot Hg lamps again until they have cooled down.

It is best to keep a record of the number of hours a lamp has been in use (hour counter in the power unit) and compare it with the manufacturer's specifications.

Spent burners become discoloured and should be exchanged before the specified life expectancy has expired.

The LH 106z L is opened by undoing the fixing screws on the lid (33.10).

Pull the cut-out plug slightly out of its socket and flip up lid (33.11, 33.1).

Always insert the burner so that



#### Attention:

1. the lettering is <u>upright</u> after insertion (different diameters of the metal base for the Hg 100 and Xe 75 burners ensure that these are always inserted the right way up).

2. if the bulb has a seal point (35a.2), the burner is turned so that this point will be at the side, not in the light path.

Put the upper pin of the burner between the clamps of the flexible power supply and clamp with screw (33.5).

Unscrew the stud (35.3) in the holder slightly, insert the lower end of the metal base and retighten the stud.

To exchange the collector on the lamphousing 106 z:

Using the focusing knob (36.1), move the collector to the rearmost position. Pull the focusing knob of the collector outwards so that the collector can be removed.

### Ţ

#### Attention:

Make sure that the lamp base and the power unit have the same number. If the lamp base is marked L1, for example, L1 must also be set on the power unit to make full use of the lamp and not to shorten its life.

Move the collector to the front position with the focusing knob (36.1).



#### Attention:


#### Remove the protective cover from the burner.

Put the lamp holder with burner inserted into the lamphousing and secure with the screws (10.10). Try moving the collector (36.1): it must not touch the power lead. When closing the lamphousing, make sure that the pins of the cutout plug engage in the sockets (35.11). Retighten the screws of the lid. Push the cut-out plug in as far as it will go.

Attach the lamphousing to the microscope and connect to the power unit (compare mains voltage!).

#### Adjust the burner **immediately** after ignition.

Fig. 36 Lamphousing 106 z L with Hg 100 W lamp 1 Collector focusing, 2 Lamp adjustment, vertical, 3 Lamp adjustment, horizontal, 4 Lamp holder Hg, 5 Reflector adjustment (not visible)

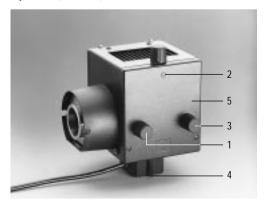

#### Assembly of the tubes and tube adapter HC R/IR

Using a screwdriver, slacken the clamp screw (37.1; 38.1; 39.1) on the side of the tube change mount on the stand, mount the tube (37; 38; 39) or tube adapter HC R/IR (40) (clamp screw points to the right) and align with edges parallel to the microscope (the Siedentopf binocular points upwards in a V shape).

### 1

#### Attention:

Hold on to the tube adapter until the clamp screw is tightened.

The guide pin in the tube mount of the stand must fit into the groove of the tube change interface or interface of the tube adapter HC R/IR. Retighten the clamp screw. The procedure is the same for mounting the tube on the HC R/IR adapter. Similarly, the DM R tubes can be connected via this adapter, e.g. the binocular observation and photo tube HC FSA 25 PE (41.1), viewing angle 30°.

With side port for reflecting measurement scales and  $\mu$  marks into the microscope image (slide overlay) and for connecting the MACRODUAL ZOOM device.

Field of view index up to 22.

Eyepiece diameter 30 mm for HL PLAN 10x/20 or 22 eyepieces.

Eyepieces with larger field of view numbers are not recommended for use on the DM IRB.

The following tubes from the Leica DMR range are also adaptable:

Bino HC BSA 25 (42.1)

Trino HC FSA 25 P and PR (42.2)

(P + PR = with and without back reflection)

#### Photo port for 1 photo/TV connection (43.2) Photo port for 2 photo/TV connections (43.1)

Switchable 100 %/100 % (25.3)

All Leica DMR trinocular tubes have the following beamsplitting system: 100% vis., 100% photo or 50 %/50%.

Fig. 37 HCl B22, binocular tube with 45° viewing angle, field of view up to 22 mm, eyepiece diameter 30 mm for HC PLAN 10x/20 or 22 eyepieces, interpupillary distance setting: 55 – 75 mm

1 Clamp screw, 2 Eyepiece port, 3 Siedentopf binocular part


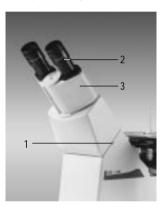


Fig. 39 HCI BV22, ergo binocular tube with  $15^{\circ}$ –  $50^{\circ}$  viewing angle, field of view index up to 22, eyepiece diameter 30 mm for HC PLAN 10x/20 or 22 eyepieces, interpupillary distance setting: 55-75 mm

1 Clamp screw, 2 Eyepiece port, 3 Siedentopf binocular part

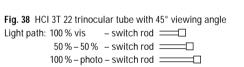

Field of view index up to 22, eyepiece diameter 30 mm for HC PLAN 10x/20 or 22 eyepieces, interpupillary distance setting: 55 – 75 mm

1 Clamp screw, 2 Eyepiece port, 3 Siedentopf binocular part, 4 Photo/TV exit. 5 Switch rod



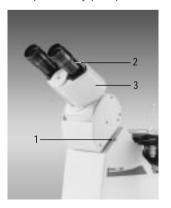


Fig. 40
1 Tube adapter HC R/IR, 2 Clamp screw



Fig. 42 Leica DM R HC tubes 1 HC BSA 25, 2 HC FSA 25 P + PR, 3 Beamsplitter switch rod, 4 Mount for photo adapter tube, 5 Clamp for photo adapter tube, 6 Clickstop position for Pol eyepieces, 7 Socket for control cable (PR tube only)

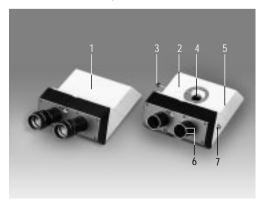


Fig. 41 Tubes from the DMR range

1 HC FSA 25 PE, 2 Side port for optical overlay, 3 Tube adapter IR HC, 4 Clamp screw for mounting the adapter to the stand, 5 Clamp screw for mounting the tube to the adapter, 6 Photo/TV port


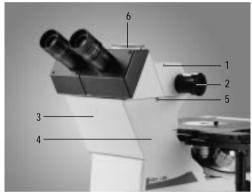


Fig. 43 Photo adapter tube 1 Photo adapter tube with 2 exits, 2 Photo adapter tube with 1 exit, 3 100% / 100% switch rod, 4 Clamp screw

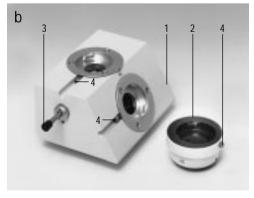

# Adaption of the slide overlay device and the macro dual system

With the Leica DM IRB or Leica DM IRE2 inverted microscope, the slide overlay and macro devices can only be adapted onto the FSA 25 PF tube.

This tube has a side flange (44.1) for mounting the reflection optics. These reflection optics are used for mechanical and optical adaption of the slide overlay device and the macro dual zoom system.

The slide overlay device consists of the reflection optics (44.3), the illumination unit with 6 V 4 W halogen lamp (44.8), the standard 5 x 5 cm slide holder (44.6) and the control (44.5) for focusing the slides. The halogen lamp is powered by a separate transformer (Fig. 45). Mount the reflection optics (44.3) onto the tube flange (44.1) with the coupling ring (44.2), ensuring that the guide pin engages in the groove, and screw down. In the same way, screw the slide overlay device with coupling ring to the reflection optics, again watching the position of the guide pin.

Fig. 45 Transformer



Fig. 44 Slide overlay device on the FSA 25 PE tube (with tube adapter/45)

1 Tube flange, 2 Coupling ring of reflection optics, 3 Reflection optics, 4 Coupling ring of slide overlay device, 5 Knurled focusing ring, 6 Slide holder 5 x 5 cm, 7 Filter slot, 8 Illumination adapter tube of lamphousing


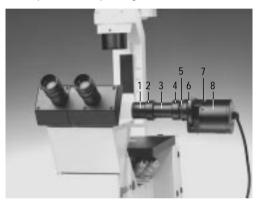


Fig. 46 Macro device on FSA 25 PE tube with tube adapter/45 1 Tube flange, 2 Coupling ring, 3 Reflection optics, 4 Coupling ring, 5 Macro adapter, 6 Screw ring, 7 Zoom setting ring 1:4, 8 Scale of zoom factor, 9 Scale of magnification factor of the working distance, 10 Scale of object distance from the bottom edge of the mirror housing, 11 Mirror housing

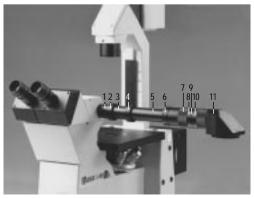

To adapt the macrodual system screw the reflection optics (46.3) to the tube flange with the coupling ring (46.2). Align the macro adapter (46.5) to the macro dual zoom and secure with the screw ring (46.6). Screw the macro adapter and macro dual zoom to the reflection optics with the coupling ring.

Check that the guide pin engages in the groove.

# Inserting the eyepieces

The eyepieces are inserted into the eyepiece tubes.

Use the following eyepieces only:

HC PLAN 10x/20 HC PLAN 10x/20 M HC PLAN 10x/22 HC PLAN 10x/22 M HC PLAN 12.5x/16 M Widefield 16x/14 B (M) Widefield 25x/9.5 B (M)

(a spacer ring is required for the widefield objectives)

Information on the diameter, the visible area of the specimen and the total magnification of the microscope can be found in the chapter "Technical data; performance data".

# Inserting graticules\*

You can retrofit graticules yourself to the HC PLAN eyepieces in the above list.

Graticules can only be inserted in eyepieces with an adjustable eyelens =  $\underline{M}$  type. The second eyepiece should be an M type as well.

# Important!

Be very careful to keep the optical surfaces clean. Any dust particles and finger marks will show up in the image.

The graticule diameter for all HC PLAN eyepieces is 26 mm.

# Eyepieces 10x/20 M and 12.5/16 M only:

- Screw the retaining sleeve out of the underneath of the eyepiece.
- Insert the graticule with the coated side facing downwards (towards the objective). If there is any lettering on the graticule it must be imaged the right way round when viewed in the later observation direction.
- · Screw the retaining sleeve back in.

# Eyepieces 10x/22 M only:

- · Screw out the underneath of the eyepiece.
- Remove the retainer ring inside it with a blunt blade.
- Insert the graticule with the coated side facing downwards (towards the objective). If there is any lettering on the graticule it must be imaged the right way round when viewed in the later observation direction.
- Screw the retainer ring back in.
- Screw the underneath of the eyepiece back in.

# Inserting the photoeyepieces\*

The HC PLAN observation eyepieces (slot-in diameter 30 mm) are designed for direct visual observation. For the adaption of photo-micrographic equipment with a fixed magnification factor, e.g. DMLD and MPS systems, and for special TV adaption systems, special eyepieces with a slot-in diameter of 27 mm and the engraving HC...PHOTO are used (note the adapter!)

See special manual for further details on adapting photo and video equipment.

# Screwing objectives in and out

For the electronic version of the microscope, the Leica DM IRE2, the objectives are screwed in during the initial installation (see relevant chapter). For the manual version, proceed as follows:

Remove the screw covers from the objective threads.

Screw the objectives into the openings in the eyepiece so that the magnification can be changed in steps (e.g. in the order 4, 10, 20, 40).

Fig. 47



If any positions remain unoccupied, close them with a screw cover to prevent dust penetrating the microscope optics.

Please note that the front lenses of the objectives point upwards and are therefore more exposed to contamination than those on upright microscopes.

Therefore check fairly frequently that the front lens is clean.

A constantly updated optics sheet outlines the current range of objectives that can be used on the Leica DM IRB and Leica DM IRE2. Ask your Leica agency for a copy.


# Assembling the stages, the plane stage and object guide

# Plane stage

The plane stage is fixed to the microscope with 3 screws (48.4). The object guide can be mounted to either the right or the left of the plane stage (48.2).

Fig. 48 Plane stage

1 Insert ring, 20/40 mm diameter, 2 Drill holes for mountable object guide, 3 Drill holes for specimen clips, 4 Drill holes for securing the stage

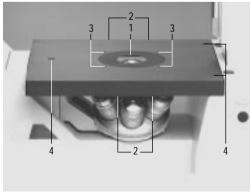

# 3-plate x/y stage

The 3-plate x/y stage no. 19, size 247 x 230 mm, x-y adjustment range 60 x 40 mm, is delivered in separate packaging and assembled as follows:

This stage is usually delivered with the DM IRM, so the description of its assembly has been taken from the DM IRM manual!

- Screw the 3 Allen screws out of the stage support surfaces and wipe any remains of packaging or dust, etc. from the stage with a clean cloth.
- 2. Align the stage with the x-y drive (49.1) at the front right and lay it so that its undersurface rests on the stage support surfaces.
- 3. Align the drill holes in the stage over those in the support surface. If the drill holes are covered, please adjust the upper stage plate with the x-y stage drive.
- 4. Screw down the stage with Allen screws.

To assemble the square insert plate:

1. Insert the corner of the insert plate that is marked red (50.5) at an angle from above into the corner of the stage that is also marked red and is fitted with a spring (50.5).

# Attention:

Only press the spring at the side!

Do not press the square insert plate onto the spring from above, as the insert will then not be aligned plane-parallel to the stage and can be bent.

2. Insert the round stage inserts into the opening (50.1).

Fig. 49 3-plate x/y stage no. 19 without inserts

1 Stage drive, 2 Rear fixing holes, 3 Front fixing hole (not visible, concealed by stage plate), 4 Corner with red dot and spring


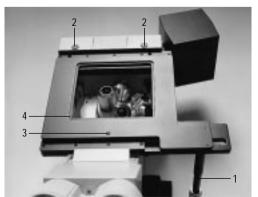


Fig. 50 3-plate x/y stage

1 Insert ring, 20/40 mm diameter, 2 Drill holes for specimen clips, 3 Drill holes for securing the stage, 4 Coaxial drive for specimen positioning with universal joint, 5 Red markings

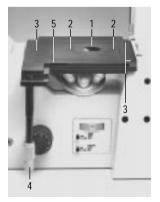

# Rotary stage and insert frame for coverslips

The rotary stage (51) is secured with 3 screws (51.3). The rotary mount has to be moved to make all the screw holes accessible. Align the screws (51.2).

# • Attention:

Washers (51.3) should be used as well for the back drill holes. Only screw the screws in lightly, as the rotary stage first has to be pressed into the centre. This is done by inserting the centration aid (51.4) into the rotary stage. Engage the Bertrand lens by turning the knurl and focus with the slider on the knurl. Move the stage until the bright circle is in the centre of the field of view. Then secure the stage in position, disengage the Bertrand lens and remove the centration aid. To secure specimen slides in the frame inserts (52.1), press on the middle of the leaf spring (52.2) and slide in the coverslip in the direction of the arrow. Clamp the frame insert in the object guide (51.1).

# Connecting the microscope to the mains

When you have installed all the components as described, you can connect the microscope to the power supply with the mains cable.

If you have the manual version of the Leica DM IRB, installation is now complete and you can jump to the "Operation" chapter.

If you have a DM IRE2 model (i. e. the electronic version), there are more instructions in the following chapter "The E-Version Leica DM IRE2".

Fig. 51 Rotary stage
1 Object guide, 2 Screws for securing the stage, 3 Washers,
4 Centration aid, 5 Knurl for Bertrand lens


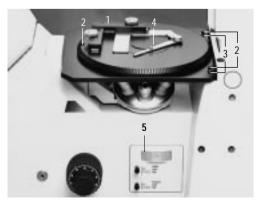


Fig. 52
1 Frame insert for coverslips, 2 Leaf spring

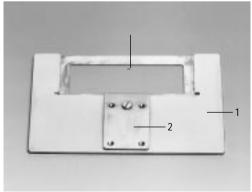

# The E-Version Leica DM IRE2

#### Features of the Leica DM IRE2

The Leica DM IRE2 offers the following additional functions:

- Motorised, sextuple objective nosepiece
- Electronic focusing
- Coding of the IC objective prisms\*
- Motorised fluorescence filter cube change with electrically operated dark flap\*
- LC display of microscope functions.
- Motorised magnification changer
- Motorised tube lens changer
- External Electronics box
- Separate x/y/z control\* for remote control

- Firmware update free of charge from the Leica Website<sup>1)</sup>
- 1)The EPROM version number of the single modules is displayed by simultaneously pressing the "LEARN" and "CHANGE" keys (Fig. 57), and by pressing the "CHANGE" key afterwards you can obtain the version numbers of the individual modules in succession.

See also "Downloading a Firmware update  $\rightarrow$  p. 68.

For users who want to program the Leica DM IRE2 microscope themselves, a free software development kit called "Leica SDK" is available on request.

Fig. 53 Total view of Leica DM IRE2



### The LEICA CTR MIC Electronics Box

The Electronics Box Leica CTR MIC (Fig. 54) contains the external power unit for the lamp as well as the electronics cards for driving the motorized functions on the microscope.

The On/Off switch (54.1)is on the front. A green LED (54.2) indicates the operation status.

Cable connections  $\rightarrow$  p. 45



## Attention!

The Electronics box must be installed at least 10 cm away from walls and other inflammable objects.



# Attention!

On no account should you connect the Electronics box to the mains before the whole system has been assembled! Check that all switches are at "OFF".

Fig. 54 LEICA CTR MIC Electronics box 1 Mains switch 2 Pilot indicator



# The x/y/z control\*

The x/y/z control (55a) is used for focusing the image (55a.3) by using a turning knob, controling the lamp brightness (55b.5) and magnification change (55b.7) by keys.

For a comfortable operation the height position of the knobs (fig 55a) can be set to an individual level by turning the wheel (55a.4).

Fig. 55a x/y/z control

1, 2 Movement in x/y direction (for special applications), 3 Setting the focus, 4 Individual knob height position

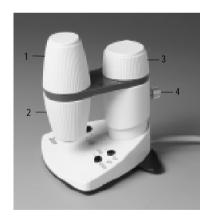


Fig. 55b x/y/z control keys 5 Lamp brightness up/down, 7 Magnification change



# Cabling

Before the other components are assembled, the components installed and assembled so far have to be connected up to the electronics box.

- Connect the microscope (56a.1) to the Microscope socket (56.3) with the cable with a 50-pin plug.
- The x/y/z control is connected to x/y/z Control (56.2).
- Connect the lamphousing to the 12V 100W lamp input (56.5).


- To connect a PC, use the serial cable supplied.
   Connect the serial interface of the PC to the RS 232C interface of the electronics box (56.1).
- Connect the electronics box to the power supply with the mains cable (56.4).

Fig. 12 Terminal panel of electronics box

- 1 PC (RS 232)
- 2 x/y/z control
- 3 Microscope
- 4 Power supply
- 5 Lamp (halogen 100W)

1 Electronics box port

Fig. 56a Backside Leica DM IRE2

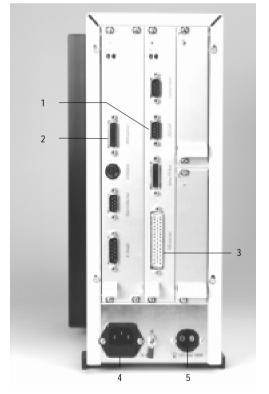

45

# Start-up using the LCD control panel

The assembly of the individual components, such as transmitted light illumination column, condenser, etc. has been completed.



# Important note:

Before using a brand new Leica DM IRE2 microscope for the first time, an initial installation has to be carried out.

Instead of initiation with the LCD controls, it is also possible to perform the fine configuration with the Microscope Wizard (MicWizard).

See "Software operation"  $\rightarrow$  p. 63.

Straight after the Leica DM IRE2 microscope is switched on, the system will be initialised. This takes a few seconds. A message to this effect will appear in the LC display on the front of the microscope.


# Important:

The objectives should not be screwed in at this point. The best time to do this is when executing the learn mode.

Generally you are free to choose the order in which the separate steps of the learn mode are carried out. However, for the first installation we recommend you keep to the following order:


Check that the focus position  $\uparrow$  and the lower threshold  $\downarrow$  are deleted, i. e. neither of the two symbols may appear in the display.

Fig. 57 LCD control panel

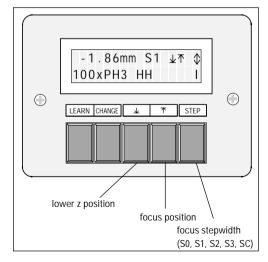


### Learn mode

After switching on, the microscope is in the normal operation mode.

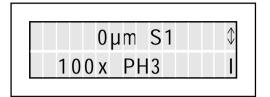

Normal operation mode

The learn mode is switched on with the "LEARN" key.

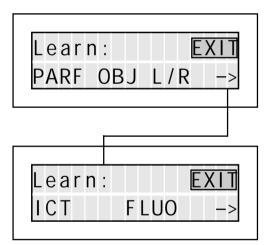

Input menu of learn mode

The "EXIT" option in the display flashes. If you press the "LEARN" key again, you automatically switch back to the normal operation mode.

# Installing the objective prisms

If your system is not equipped for interference contrast, skip this section and the next and continue reading at "Installing the objectives".


The IC objective prisms are normally put in the turret at the factory. If you are retrofitting TL interference contrast, refer to the instructions on page 27 of this manual.

# Learning the IC objective prisms (IC turret)

Using the "CHANGE" key, select the ICT option in the Learn mode. Keep pressing the "CHANGE" key until the second learn menu appears and the ICT position in the display flashes.

Confirm by pressing the "LEARN" key.

Turn the IC turret (situated under the objective nosepiece) until it clicks into the brightfield position (H).

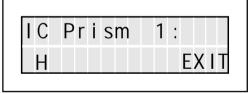

Learn mode: IC turret

Operate the focus handwheel until the letter H appears on the display panel as well. Turn the IC turret by a quarter of a rotation into the next clickstop area. The message "IC prism 2" appears in the display. Read the marking on the turret and set the electronic display to the same code by turning the handwheel. Do this for all four positions. Empty positions should be coded "\_".

Conclude the Learn mode for the IC turret by pressing the "CHANGE" key. "EXIT" flashes in the display; confirm with the "LEARN" key.


# Installing the objectives

Select the "Objectives" option in the Learn mode (OBJ) by pressing the "CHANGE" key; the "OBJ" option now flashes.

The objective nosepiece rotates through 180° so that the current objective is in the most accessible position (furthest to the right on the outside).

This function also serves for cleaning, assembling, immersing, etc. the objective.

Confirm your choice with the "LEARN" key.

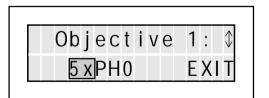

Learn mode: Objective data - Magnification

Select objective "1" by pressing the objective change keys (behind the focus handwheel on the left).


Now screw the objective with the lowest magnification into the nosepiece opening which is furthest to the right.

# Display: Objective magnification

By turning the focus handwheel, select the number in the electronic display that corresponds to the magnification of the objective.

By pressing the "CHANGE" key now, select the display field for phase contrast.

## Display: Phase contrast

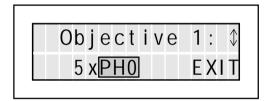


Learn mode: Objective data - Phase contrast

By turning the focus handwheel, select the display that corresponds to the engraving on the objective (PH1, PH2...). The symbol "--" is for brightfield objectives.

By pressing the "CHANGE" key now, select the display field for the IC objective prism.

# Display: IC objective prism

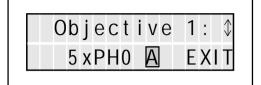

Learn mode: Objective data – IC coding (code letter)

By turning the focus handwheel, select the display that corresponds to the top line of engraving on the objective (A, B, C, D, E, F). The symbol "H" (Hellfeld, = brightfield), is for objectives that are not suitable for IC.


By pressing the "CHANGE" key now, select the display box for the operating mode.

# Operating modes: Dry/Immersion

To ensure simple yet safe objective change, the objectives have to be classified in one of the following three categories:

- Dry objectives (D) = all dry objectives with a short working distance (< = 3 mm).</li>
- 2. Immersion objectives (I).
- 3. Combined objectives (C) = dry objectives with a long free working distance (> 3 mm), objectives which can be used for scanning purposes as well through an oil layer.

Now select the valid objective category for the objective you are using (D, I, C) by turning the focus handwheel.

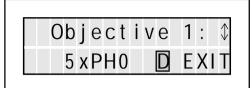

Learn mode: Objective data - Operating mode

Now all the objective parameters for the first objective have been learned, and the other objectives can be installed.

# To learn further objectives:

Select objective no. 2 with the upper objective nosepiece key. Screw **the** objective with the next highest magnification into the nosepiece opening which is now furthest to the right.

By turning the handwheel, select the magnification display that matches the objective, as you did for the first objective. Proceed in the same way for setting the Phaco display, the IC prism display and the operating mode. Then repeat the setting procedures for the other objectives.

Nosepiece positions that are not occupied by an objective are given the code "--". This has the effect that these positions are not travelled to in standard mode.

Conclude the Learn mode for the objective parameters by pressing the "CHANGE" key. "EXIT" flashes in the display; confirm with the "LEARN" key.

Before selecting the "Parfocality" option in the Learn mode, you should take the following steps:


- If you want to use a specimen holder on your stage, fit it now.
- Put a specimen on the stage.
- Switch to the highest magnification and focus the image of the specimen.
- Set the focus position with the  $\boxed{\uparrow}$  ( $\rightarrow$  fig. 57).

You can now begin with learning the parfocality.

# **Parfocality**

Select the "Parfocality" option ("PARF") in the Learn mode by pressing the "CHANGE" key; the "PARF" option now flashes.

Confirm your choice with the "LEARN" key.

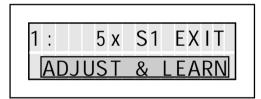

Learn mode: Parfocality

First learn the parfocality for all dry objectives.

# Dry objectives

Select the dry objective with the highest magnification by pressing the objective nosepiece keys (behind the focus handwheel on the left). Focus the specimen with the focus handwheel. Use the "STEP" key to select the suitable focus stepwidth ( $\rightarrow$  p. 57), also using the focus keys if neces-sary (behind the handwheel on the right). Confirm the adjusted focus position by pressing the "LEARN" key. "ADJUSTED" appears in the display.

Now select the dry objective with the next lower magnification.

Focus the specimen again with the focus handwheel and confirm with "LEARN".

Repeat this procedure until you have reached the smallest dry objective.

For low-power dry objectives (5x, 10x) it is advisable not to correct the focus any further, as these objectives are focused immediately after switching on.

# Oil immersion objectives

Once the parfocality has been learnt for all the dry objectives it can be done for the immersion objectives.

Please remember that if the specimen is very small and lightweight it must be fixed onto the stage to prevent it being moved by the adhesive force of the oil.

Select the oil immersion objective with the objective changing key.

Apply a drop of immersion oil to this objective.

To do this, you can move the objective to the most easily accessed outer position with one of the objective changing keys.

Return the objective to the working position and focus.

Confirm the learnt focus position by pressing the "LEARN" key. "ADJUSTED" appears in the display.

Proceed similarly for any other immersion objectives.

Conclude the parfocality setting by selecting the "EXIT" option with the "CHANGE" key and confirming with "LEARN".

# Exiting the Learn mode

To leave the Learn mode, select "EXIT" and confirm with "LEARN".

# Individual user settings

Select the option "L/R" in the Learn mode by pressing the "CHANGE" key and confirm your choice by pressing the "LEARN" key.



Learn mode: User settings

This option allows you to choose whether you want to operate the objective nosepiece on the left or the right side of the microscope. The function of the focus keys then also shifts to the oppositeside of the microscope.

It is also possible to reverse the rotation direction of the handwheel and its effect on the focusing direction.

Z-drive keys	Objective keys	Nosepiece move- ment when the right handwheel is turned clockwise	Chosen function
right	left	up	0 b j e c t · < > F o c u s ⊅
right	left	down	Object · < > FocusX
left	right	up	<pre>\$Focus &lt;&gt;Object.</pre>
left	right	down	×Focus <>Object.

Possible combinations for user settings

By turning the focus wheel, choose the one of the four possible combinations that suits you hest

The standard setting made at the factory is as follows (= combination 1 in the above table):


- The nosepiece is operated on the left side of the microscope; accordingly the keys for lowering and refocusing are on the right.
- Rotation direction of the handwheel and focusing movement:

If the handwheel on the right of the microscope is rotated clockwise, the objective nosepiece is moved upwards, i.e. the objective moves towards the sample.

Conclude the Learn mode for user adjustment by pressing the "CHANGE" key. "EXIT" flashes in the display; confirm with "LEARN".

# Installing the fluorescence filter cube

Select the "FLUO" option in the Learn mode by pressing the "CHANGE" key. Confirm by pressing the "LEARN" key.

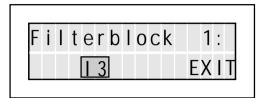

Learn mode: Fluorescence

Pull out the filter cube drawer on the left side of the microscope stand and put the filter cube you want to use in the holder of the fluorescence turret plate in the light path. The filter cube must click noticeably in position.

Now select the corresponding filter cube name in the LC display by rotating the focus hand-wheel.

# Learning other filters:

Select the next filter cube position by pressing one of the "FLUO" keys on the control panel of the FLUO module( $\rightarrow$  p. 60). Insert the filter cube and select the corresponding name in the display.

Repeat the procedure for any other filters. Unoccupied positions are given the code "-".

To conclude the Learn mode for the fluorescence module, press the "CHANGE" key. "EXIT" then flashes in the display; confirm with "LEARN".

Now leave the learn mode by pressing "EXIT" and confirming with "LEARN".

# Concluding the installation

Installation is now complete. You are back in the normal operation mode.

# Operation motorized objective nosepiece for Leica DM IRE2

DThe electronic nosepiece control allows easy and safe change of the objective magnification. Objectives are changed with 2 push buttons (objective changing keys) which are easily accessed behind the focusing handwheel on the **left** of the microscope.

The **upper** key is pressed to **increase** the magnification, the lower key to decrease the magnification. Short pressure on the key switches the next lower or to higher magnification. If you sustain the key for longer then 0.3 sec., the display jumps to the next higher or lower magnification every 0.5 sec. The nosepiece is not actually turned until you choose a specific magnification by releasing the key. All you have to do to switch from any higher magnification down to survey magnification, for example, is to sustain the lower objective key for approx. 3 sec. The selected objective is turned into the light path in the direction that involves the shortest travel distance.

#### n. b.:

When installing the system (see "Individual user settings", ( $\rightarrow$ p. 51) it is possible to operate the objective change function on the **right** side of the microscope instead of the **left**.

Fig. 58 Left side of Leica DM IRE2



# Operation modes for Leica DM IRE2

#### DRY and IMMERSION

The Leica DM IRE2 microscope is equipped with a switch function between the operating modes "Dry" and "Immmersion" (IMM) to ensure straightforward, error-free operation.

This prevents

- dry objectives from being immersed in oil by mistake
- immersion objectives from being used without immersion oil by mistake.

# Changing the operating mode

To ensure smooth operation, immersion oil must be applied to all oil immersion objectives in the nosepiece that are to be used before you start work Contamination of the dry objectives is prevented by the fact that the objective nosepiece is always lowered before objectives are changed.

When switching from one operating mode to the other, please proceed as follows:

Starting in the DRY mode:

(Display at the bottom right in the LD display: D) Press the keys "lower z position" and "focus position" on the control panel of the microscope simultaneously to switch from Dry to Immersion.

The objective nosepiece is lowered and the message "Change Objective" appears in the display. The corresponding oil immersion objective is switched into the light path with the objective changing key (normally the upper objective changing key). From now on, only oil immersion objectives or objectives of the "Combined" category are travelled to.

("I" now appears in the LC display at the bottom right).

The procedure for switching to the Dry mode is analogous:

Again, press the keys "lower z position"  $\bot$  and "focus position"  $\frown$  on the control panel of the microscope simultaneously to switch from "Immersion" to "Dry".

The objective nosepiece is lowered and the message "Change Objective" appears in the display. You now have the opportunity to put a new specimen slide (without immersion oil) on the stage. Then, using the objective changing key, switch the appropriate dry objective into the light path (normally the lower objective changing key). From now on, only dry objectives or objectives of the "Combined" category are travelled to.

("D" now appears in the LC display at the bottom right).

To learn objective categories, see "Installing the objectives" ( $\rightarrow$  p. 48).

# Automatic lowering of the objective nosepiece

In order to be able to operate the objective changing keys easily and without touching the stage in situations where space is difficult, e.g. if there are small object inserts in the stage and/or if the specimen plane is relatively high above the stage level, the objective nosepiece is lowered before it is rotated. The end position for this lowering (= lower z position  $_{\perp}$ ) can be chosen by the user.

If the lower z position is not set, the objective nosepiece is lowered by the maximum possible distance.

# Brightness adjustment for Leica DM IRE2

Leica DM IRB and Leica DM IRE2 microscopes are fitted with an incremental transmitter instead of a potentiometer for adjusting the brightness. This means that the dial movement is limited electronically and therefore has no endstops.

After it has been switched on, the microscope is in normal operating mode. The current z position in  $\mu m$  or mm is indicated on the left in the first line of the LC display.

By pressing the "CHANGE" key on the control panel, you can switch to the lamp voltage display. The lamp voltage is indicated in volts from 2.5 V - 12 V. If you press the "CHANGE" key again, you will switch back to the z position display.

The lamp brightness is changed by turning a dial on the left side of the microscope stand. If you have not switched to the lamp voltage display already, this will happen automatically as soon as the dial is operated. In the same way, the microscope switches to the z position display when you alter the z position with the dial or by keystroke.

To turn off the transmitted light illumination, first turn the lamp intensity down to 2.5 V. Then continue turning beyond the lowest value. To switch on again, rotate briefly in the opposite

To switch on again, rotate briefly in the opposite direction.

The 10.5 V setting is recommended for photomicrography.

# Brightness adjustment with the x/y/z control

Pressing one of the keys (59.1) at the x/y/z control increases or decreases the lamp intensity within a range of 0% upto 100% brightness.

Fig. 59 x/y/z control keys

- 1 Lamp brightness up/down
- 2 Magnification change (only DM RXA2)



# Electronic focus for Leica DM IRE2

The electronic focus offers the user the following advantages:

- Extremely sensitive focusing, especially for high magnifications.
- Fine focusing selectable in 4 steps; coarse focusing can be switched on "blind" at any time.
  - The stepwidths desired by the user (corresponding to gear ratio and sensitivity) are allocated to every single objective and automatically reset as soon as the particular objective is used.
- Fast lowering of the objective nosepiece and exact repositioning to the previously set focal plane.
- Electronic parfocality of all objectives through intelligent linking of motorized objective nosepiece and electronic focus drive.

The controls of the electronic focus are:

- The focusing handwheels, conventionally positioned on both sides of the microscope.
- Two keys (focus keys) for fast lowering of the objective nosepiece and returning to the focal plane. The keys are in a convenient position in front of the right handwheel.
  - If both focus keys are pressed simultaneously, coarse focusing is switched (SC). The coarse focus is switched off again the moment that the two keys are pressed simultaneously again, or a different focusing speed is switched with the STEP key.
- Step key on the LCD control panel for switching the focusing speed (Fig. 57). The stepwidths are assigned to the following objective magnifications:
  - S0: 63-150x, S1: 40-50x, S2: 20-25x, S3: 10-16x, SC: 1.6-5x

- Key for defining the "focus position)"
   Pressing the key for longer than 1 sec. deletes this value, another press of the key for longer than 1 sec. sets the current Z position as "focus position".



If using the microscope without the stage plate, please note that when you replace the front fixing screw if the stage plate, it must not be screwed in fully. If it is screwed in too far it will block the focus motor. The message BLK then appears in the LC display on the front of the microscope.

# Focusing with the x/y/z control

The electronic focus can be controlled with x/y/z control, too. Therefore the turning knob ( $\rightarrow$  p. 44, 55a.3) is used.

# Coded IC objective prisms (option)

The objective IC prisms are arranged on a turret underneath the objective nosepiece. To facilitate allocation and thus the setting of the objective prisms to the objectives, the LC display on the front of the microscope indicates both the IC prism required for the objective in the light path and the currently effective IC prism on the turret.

The latter flashes if the combination is wrong.

# Mot. fluorescence filter cube change\* for Leica DM IRB

A control panel is connected to the Leica DM IRB for motorised filter cube change.

Three keys are used for operation:

The two "FLUOR" keys are used to switch to the adjacent filter cube. If you switch one of these keys twice, you switch by two filter cube positions.

The "SHUTTER CLOSED" key is used for opening and closing the electric shutter. The LED indicates whether the shutter is closed or not (LED lights up when closed).

Fig. 60 Control panel for Leica DM IRB



# Mot. fluorescence filter cube change for Leica DM IRE2

The operation is controlled via the front display of the microscope.

There you will see two keys for switching to the next filter cube to the right or left. LEDs 1-4 indicate the filter cube that is currently in the light path.

The push button "Shutter" is used to open and close the electric shutter. The corresponding LED labelled "closed" lights up when the shutter is closed.

Fig. 61 Fluorescence control panel for Leica DM IRE2



# Front control panel for Leica DM IRE2

On the front of the microscope (Fig. 62) there is an LC display with five control keys as well as three areas with LEDs and push buttons for controlling the fluorescence filter cube wheel including the electric shutter, the various viewing ports and the change of the tube optics (magnification changer including Bertrand lens).

# LC display

The display gives information on the following functions:

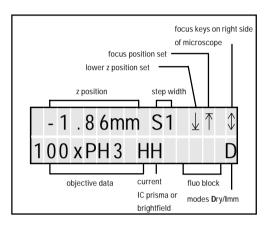


Fig. 62 Front control panel Leica DM IRE2

- 1 Push-buttons and diode display of the RF4 module,
- 2 Control panel "Ports"
- 3 Front control panel with LC display
- 4 Key for shutter control
- 5 Push-buttons for magnification changer



- Z position in µm or mm.
- Set stepwidth for the fine focusing (S0, S1, S2, S3 and coarse focusing = SC, can be switched on and off by simultaneously pressing both focus keys).
- Lower Z position set (symbol visible = threshold set).
- Focus position set (symbol visible = threshold set).
- Objective data (corresponding to the objective engraving).
  - magnification
  - Phaco (PH1, PH2, ...)
  - required objective IC prism (option).
- Currently switched IC prism or brightfield position.
- Fluo cube (option).
- Operating mode (dry or immersion).

At the factory the microscope is set so that the fast focusing is controlled with the two keys on the **right** side of the microscope, indicated by the symbol  $\updownarrow$  on the **right** in the upper line of the display.

Similarly, if this symbol appears on the **left** side of the display, it means that the focusing is controlled with the two keys on the **left** of the microscope.

Details of how to operate the LC display with the five control keys are given in the Learn Mode section  $\rightarrow$  p. 47.

#### n. b.:

When the microscope is installed the influence of the rotation direction of the handwheel on the focusing direction of the objective nosepiece can be reversed ( $\rightarrow$  p. 51).

# Fluorescence filter cube change

The operation of the area labelled "FLUO" is described in the section "Mot. Fluorescence filter cube change for Leica DM IRE2" ( $\rightarrow$  p. 60).

# Viewing ports

The "PORTS" area has two push buttons and three LEDs. You can use the buttons to choose between the three ports "Vis" (tube), "Side" (side port) and "Bottom" (bottom port). The currently active port is indicated by LED (LED lights up). If the microscope has prisms for activating more than one port at a time, all the active viewing ports are indicated by LED (all relevant LEDs light up).

(See also p. 75ff).

# Change of tube optics

The area marked "MAG" has two push buttons and three LEDs for switching magnification 1x and 1.5x and swinging in the Bertrand lens. The module in the light path is indicated by LED (LED lights up). It is still possible to fine-adjust the Bertrand lens on the right side of the microscope (Fig. 69,  $\rightarrow$  p. 75).

# Software operation for Leica DM IRE2

The Leica DM IRE2 is normally delivered fully configured so that you can start using it right away. However, if the configuration is changed (by adding objectives, for example) or if you want to install a firmware update, you will need the Leica DM SDK Leica Software Develpment Kit. The current firmware is already installed on your electronics box. If you install a firmware update, please read the updated information supplied with it.

First of all, connect your PC or laptop to the Electronics Box using the serial cable supplied (RS232 socket).

# Installing the software

If an earlier version of Leica DM SDK is already installed, please deinstall this first with Settings/Control Panel/Software.

Now put the CD in your CD drive and start the SETUP program. Follow the instructions given. You can obtain further information by clicking the help keys of the individual windows.

After the Setup you will find the programs for installing and operating the Leica DM IRE2 under the folder you have set up (e.g. Leica DM SDK 4.11 ....).

Firmware Update Readme Mic Config Mic Control Mic Wizard

If a later version of the "Leica DM SDK" software has been installed you can reinstall the entire firmware or just parts of it using the "Firmware Update" program.

In "Readme" you will find up-to-date information and notes on the software which were written after this manual was printed.

The "MicConfig" program is used for configuring the individual microscope components.

The microscope components can be driven and tested with the "MicControl" program.

"MicWizard" is the microscope assistant that takes you through the configuration of the individual microscope componetns step by step.

## The microscope configuration program

## Starting the program

Start the configuration program by clicking MicConf in the Leica DM SDK menu or by double clicking the corresponding program icon.

The "LEICA Microscope Configuration Tool" window appears.



At the moment, you have the choice of two languages for the dialog texts: English and German. The default value in the dialog box at the bottom left is "English" and the texts are written in English.

The first time the program is started, all microscope components are run in a simulation mode in which the corresponding hardware is merely simulated. The software can be tested without connecting microscope components in this demo mode.

The list box "Stand" contains the name "OTHER", all the other boxes contain the word "None". Also, the keys marked 'Test' are inactive, and the check boxes under "Connect!" appear dark.

# Choice of language

You can switch between the languages as dialog language (in the language selection list at the bottom left).

The language selection only takes effect when you leave the configuration program with "Save!" and then restart the MIC Conf program.

You can call up further details on this and the following settings any time you like by clicking the "Help" key.

# Setting the configuration

Choose the **IRE2** stand from the "Stand" list box. Then select the interface of your computer that you want to use for the communication with the Leica CTR MIC, e.g. **COM1**.

For the Leica DM IRE2 you now have to choose the following components:

Lamp 1: Halogen-100W

Lamp 2: None Focus: Motorized Nosepiece 1: 6 Holes Nosepiece 2: None Stage: None Tube: **HCI-Series** Tube optics: Tubl mot Fluor, Mod.: 4-Pos Transm.Dia.Mod.: None Photo module: None IC turret: 4-Pos Autofocus: None

After completing this selection, activate the (3) white squares under "Connect!".

The "LEICA Microscope Configurator" dialog window now looks like this:



After activating the interface in this way, you can press the "Test" key to check whether communication between the computer and the microscope has been established.

If the installation has been successful, the message: " The component "xxx" works properly." will appear.

Otherwise, "Communication Error" is displayed. In this case, check whether the Leica CRT MIC is switched on and whether all cable connections are correct.

# Terminating the program

The Microscope Configurator offers the possibility of just storing the new configuration or of switching directly to the Microscope

Assistant in order to perform a fine configuration. If you are installing the program for the first time, you have to do the fine configuration.

# Storing the configuration

Click the "Save!" key. The data will be stored and the MIC Conf program terminated.

# Starting the Microscope Assistant

Click the "Setup" key and select "Yes" in the following dialog:



The MIC Conf program is now terminated and the MIC Wizard program is started.

If you select "No", the new configuration is just stored and MIC Conf is terminated.

## The Microscope Assistant

## Starting the program

If you have not started the Microscope Assistant from the Microscope Configurator, you can start it by clicking **MIC Wizard** in the Leica DM SDK menu or by double clicking the corresponding program icon instead.

It is therefore possible to perform a fine configuration of the available components at any time.




Start the routine by clicking the "Start" key.

The following dialog appears:



By hitting the key "Reset Microscope" the parameters predefined by the factory can be restored. Hit "Continue" if you want to start a new microscope configuration.

You start with the definition of the individual user settings:

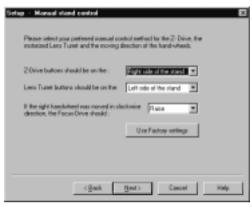

Follow the instructions given there. You can find additional information by clicking the Help key. After pressing "Continue" the next dialog will be displayed.

When the Mic Wizard program has been completed, the Leica DM IRE2 is ready for use and can be operated withthe x/y/z control. However, it is advisable to operate the Leica DM IRE2 from the computer first to check and, if necessary change, the settings.

To do this, start the MicControl program.



The first window shows you a few colored icons that you can activate for changing the objectives, setting thresholds and focus positions or defining parfocality. These functions and the operation of the software are explained in texts that can be called up by clicking the Help keys.



You can also use the MIC Control program to control the Leica DM IRE2 functions during measurement.

# Downloading a firmware update


If you install a new version of the "Leica DM SDK" Software Development Kit you can update the firmware of the electronics box. Updates of "Leica DM SDK" can be downloaded free of charge from the Leica website.

To update the firmware, proceed as follows:

- First install the new version of "Leica DM SDK".
- Start the update by clicking "Firmware Update", which you will find in the program group "Leica SDK ... " in the Start menu.
   There will now be an automatic check of

whether the firmware version numbers in the Leica DM SDK coincide with those of the electronics box.


• If the numbers are the same, the current configuration will be displayed:

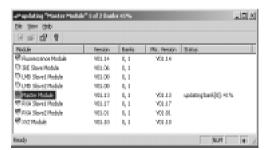

Components tested and released by Leica are marked with a green tick.

You can also use this function to call up the current version numbers of the individual modules.

 If the new Leica DM SDK contains software with higher version numbers, you will be asked to start the firmware update:

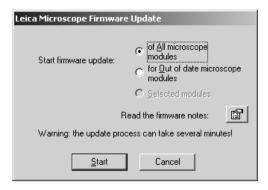

You can choose between updating all the modules or just parts. The standard choice is "all microscope modules". When the update has been successfully completed, you will receive a message to this effect.

- Switch the electronics box off and on again.
- Reconfigure the microscope.
   (See "The Microscope Configuration Program, → p. 64 and "The Microscope Wizard, → p. 66).

#### nh:

The current version numbers can also be called up with the keys of the LCD panel. The Eprom version number is obtained by simultaneously pressing the "LEARN" and "CHANGE" keys and if you then keep pressing the "CHANGE" key you can obtain the version numbers of the individual modules in succession.

# Operation of imaging and contrasting techniques



## Attention:

When using acids or other aggressive chemicals, special care should be taken. Avoid direct contact of these substances with optical and mechanical components.

## Fig. 63 a,b Leica DM IRB

1 Binocular phototube, 2 Eyepiece adapter tube, 3 Eyepieces, 4 Tube mount (tube change interface), 5 Tube port for photo/TV connection, 6 Beamsplitter switch eyepiece/photo/TV exit, 7 Mains switch, 8 Brightness adjustment, 9 Lateral TV port, 10 Coaxial coarse and fine drive, 11 Fluorescence module, 12 ICT prism adjustment, 13 Sextuple objective nosepiece, 14 Centring buttons for incident light field diaphragm, 15 Field diaphragm adjustment, 16 Filters (up to 3 filters e.g. DLF, ALF), 17 Aperture diaphragm adjustment, 18 Lamphousing mount (or mirrorhousing for two lamphousings), 19 Lamphousing, 20 Stage plate, 21 Analyser, 22 Tube lens module (Bertrand lens and magnification changer), 23 Switch rod for lateral TV port, 24 Transmitted light illumination column, 25 Condenser, 26 Transmitted light lamphousing, 27 Transmitted light field diaphragm, 28 SLR port, 29 Second lamphousing

Fig. 63a View from the right Leica DM IRB


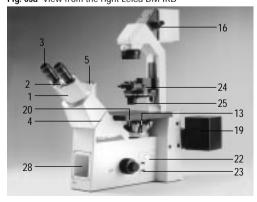


Fig. 63b View from the left Leica DM IRB

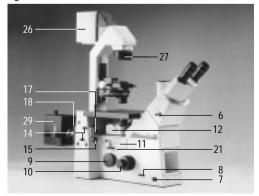

## Fig. 64 a,b Leica DM IRE2

1 Electronics box Leica CRT MIC, 2 RF4 module, 3 Coded IC objective prism disk, 4 Objective change keys (with "individual user settings"  $\rightarrow$  p. 51 the objective change keys can be switched to the focus keys on the right side of the microscope), 5 Focus handwheel, 6 Separate control for focusing, 7 Focus keys (with "individual user settings"  $\rightarrow$  p. 51 the focus keys can be switched to the objective change keys on the left side of the microscope), 8 Motorized Tube lens changer inclusive Bertrandlens, 9 Window for lamp adjustment

Fig. 64 a View from the left Leica DM IRE2

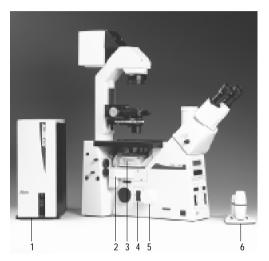


Fig. 64 b View from the right Leica DM IRE2


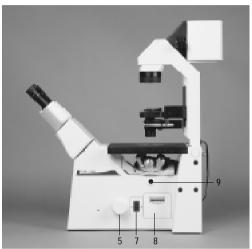


Fig. 64 c Front control panel Leica DM IRE2

10 Push-buttons and diode display of the RF4 module,
11 Control panel "Ports", 12 Front control panel with LC
display, 13 Key for shutter control, 14 Push-buttons for
magnification changer

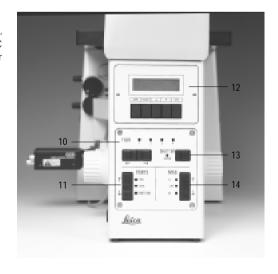

# Basic setting for transmitted light

# Switching on the halogen lamp

Switch on the 12 V 100 W lamp of the Leica DM IRB at the mains switch (63b.7).

The Leica DM IRE2 is switched on using the mains switch at the electronics box.

Adjust the brightness with the dial. The numbers are not absolute parameters, but merely serve for reproducible setting. The white dot on the dial indicates the setting for approx. 3200 °K for photography on artificial light film and for TV microscopy.

# Adjustment specimen

For initial microscope adjustment we recommend you use a specimen that has both high and low contrast areas.

It is easier to focus incident light fluorescence specimens in transmitted light first.

# Focusing the specimen

(For the DMIRE2 version, please read the section about the operation of the E focus and objective nosepiece first. Here, an example of manual operation is given for each case.)

Focus the specimen you want to examine. To do this, the objective nosepiece should be lowered first. The objective is turned into the light path by rotating the metal knurl on the nosepiece. The objective should click audibly into position.

Focus the specimen with the coarse and fine drive, which changes the height of the objective nosepiece. The stage height remains unchanged. The total vertical travel of the nosepiece is 7 mm. In air, the focusing range extends from 2 mm below the stage surface to 5 mm above it

One drum interval of the fine focusing corresponds to about 2 mm of the objective nosepiece.

# • Caution!

Please be careful with high objective magnifications when focusing or making x-y adjustments!

When using objectives with a high magnification and a short working distance (from 50x), the specimen and the stage insert may be lifted and tilted.

When scanning the specimen, the front lens of the objective may knock against the edge of the stage insert.

Lower the coarse and fine drive if possible when turning the nosepiece and changing the objectives, in order to avoid contact between the front lens and the stage insert.

# Caution

Caution with special objectives! Here there may be contact between the stage insert and the front lens the moment the objective is moved over the edge of the inner hole of the stage insert!

# Checking of various microscope components

Engage or disengage the filters (63a.16) according to the required brightness.

If necessary, disengage the Bertrand lens by turning the knurled knob (63a.22), pos. 1.

Disengage the analyser (63b.21), if necessary, by pulling it out partway.


Disengage the filter systems, if necessary, by rotating the turret (63b.11).

Push in the switch rod(s) for the beamsplitter (63a.23).

Clamp the transmitted light illumination arm with the knurled wheel (5.1,  $\rightarrow$  p. 20).

Fig. 65 Examples of objectives

1, 2 Objectives with correction mounts (Corr) for adjusting to different vessel base thicknesses (e.g. 0.1-1.3 mm and 0-2 mm), 3 Objective with built-in iris diaphragm (1.30 = maximum aperture, 0.60 = minimum aperture), 4 Magnification colour code, 5 Knurled ring for adjusting the correction mount, 6 Knurled ring for adjusting the built-in diaphragm

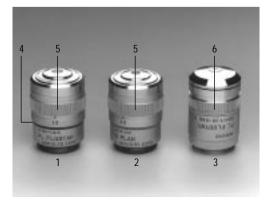

# Operation of L objectives with correction mount

Roughly set the correction mount to the thickness of the base of the vessel on the stage by turning the knurled ring. Focus the specimen with the coarse and fine drive. Then operate the correction mount until you achieve the greatest image contrast, using the fine focus if necessary.

# Setting the tubes and eyepieces

Eyeglass wearers must remove (for 10x/25) or push back (for 10x/20 and 10x/22) the anti-glare protection of the eyepieces, but it should always be left on for viewers not wearing eyeglasses.

- Set the interpupillary distance on the tube by pulling apart or pushing together the eyepiece tubes until only one image can be seen with both eyes.
- Note your personal interpupillary distance.
- If using ergotubes, set the viewing angle (15°-50°) as well by tilting the binocular viewing port. To avoid symptoms of fatigue, vary the viewing angle from time to time.
- Close any tube exits you are not using to prevent stray light disturbing the image.

#### For eyepieces with inserted graticule only\*:

- Greatly defocus the specimen or remove from the light path.
- Exactly focus the graticule by adjusting the eyelens with a relaxed eye (the eye relaxes best if you look out the window at a distant object for a moment).
- Focus the specimen, only adjusting the eyepiece with graticule.
- Then close this eye and focus the specimen by adjusting the second eyepiece only.

#### Only if neither eyepiece has a graticule inserted:

- Greatly defocus the specimen or remove it from the light path.
- Adjust the eyelens until the edge of the field of view appears sharp. When you adjust the eyelens a white line becomes visible round the basic part of the eyepiece. This indicates the correct position of the eyelens for viewers with normal or corrected eyesight.



Eyeglasses with multirange lenses (bifocal and progressive) must be removed for microscopy.

• Focus the specimen through the eyepieces.

### Only when one eyepiece is without an adjustable eyelens:

- Exactly focus the specimen through this eyepiece first (close your other eye).
- Then focus the image by adjusting the eyelens of the second eyepiece.

**Fig. 66** HCI B22 binocular tube, 45° viewing angle, field of view no. up to 22, eyepiece diameter 30 mm for HC PLAN 10x/20 or 22 eyepieces, interpupillary distance setting: 55 – 75 mm 1 Eyepiece tube, **2** Eyepiece, **3** Anti-glare protection



To correct defective eyesight:

- Look through the right-hand eyepiece tube with your right eye and sharply focus the specimen with the fine drive.
- Then look at the same area of the specimen with your left eye and rotate the left eyepiece tube until you obtain a sharp image. Do not use the fine drive for this.
- If using eyepieces with adjustable eyelenses, do not compensate for defective eyesight by adjusting the eyepiece tube, but by adjusting the eyelens of the eyepiece.

#### Trinocular tube HCI 3T22

 Set the beamsplitter at visual observation by pushing in the switch rod. The switching positions are indicated by symbols on the side of the tube.

- The eyepieces are set in exactly the same way as on the binocular tube.
- Compensate defective eyesight by adjusting the eyelens of the eyepiece.

Fig. 67
HCI BV22, ergo binocular tube with 15°-50° viewing angle, field of view no. up to 22, eyepiece diameter 30 mm for HC PLAN 10x/20 or 22 eyepieces, interpupillary distance setting: 55-75 mm

1 Clamp screw, 2 Tube port, 3 Siedentopf binocular part


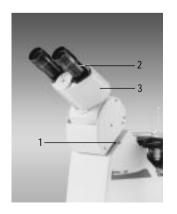


Fig. 68 HCl 3T22, trinocular tube with 45° viewing angle Light path: 100 % vis — switch rod 50 % – 50 % — switch rod 100 % – photo – switch rod

Field of view no. up to 22, eyepiece diameter 30 mm for HC PLAN 10x/20 or 22 eyepieces, interpupillary distance setting: 55 – 75 mm

1 Clamp screw, 2 Tube port, 3 Siedentopf binocular part, 4 Photo/TV port, 5 Switch rod

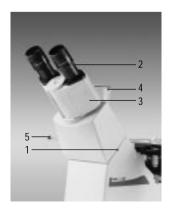

#### Operation of the side photo/TV port

The delivery comprises two alternative outfits for the lateral photo/TV exit (Fig. 69a).

#### One outfit has a beam split of

1	100% visual	0% side
2	20% visual	80 % side

#### The second version has a beam split of

1	100 % visual	0% side
2	0% visual	100 % side

#### Operation at Leica DM IRB

If the switch rod (69a.2) for the side port is pulled out, the beam split version no. 2 is active. If the switch rod is pushed in, beam split no. 1 applies.

#### Operation for the Leica DM IRE2:

The side port is addressed via the controls described on page 61.

# Operation of the front photo/TV port (only for Leica DM IRB)

Stands either with or without SLR front port can be supplied.

The beam split is as follows:

The side port is switched off, i.e. 100% of the light goes to the visual light path:

If the switch rod (69b.3) for the SLR exit is pulled, 50 % of the light goes to the SLR and 50 % to the tube.

#### Operation of the bottom photo/TV port

The microscope can be supplied either with or without a bottom port.

The beamsplitting arrangement is as follows:

If the bottom port is switched off, 100% of the light goes to the tube. If the bottom port is switched on, 100% of the light goes to this port.


Fig. 69a Bertrand lens engaged (Leica DM IRB)

1 Lever for focusing the Bertrand lens, 2 Switch lever for side port



Fig. 69b Bertrand lens engaged (Leica DM IRB)

1 Lever for focusing the Bertrand lens, 2 Switch lever for side port, 3 Switch lever for front port

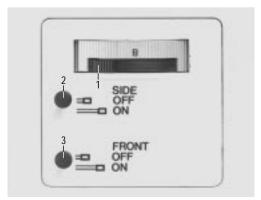

### The following **viewing port variations** are possible:

Tubus Port: TP
Front (SLR) Port: FP
Side Port 80%: SP80
Side Port 100%: SP100
Bottom Port: BP

#### The following **stand variations** are possible:

```
1. SP100 + TP (DMIRB + DM IRE2)
2. SP80 + TP (DMIRB + DM IRE2)
3. SP100 + FP (only DMIRB)
4. SP80 + FP (only DMIRB)
5. SP80 + BP + TP (DMIRB + DM IRE2)
```

#### Variant 1:

Active	ports	Beam splitting		
SP100	TP	SP100	TP	
Х	-	100%	0%	
-	х	0%	100%	

#### Variant 2:

Active	ports	Beam splitting			
SP80 TP		SP80	TP		
Х	Х	80%	20%		
-	x	0%	100%		

#### Variant 3:

Active ports			Beam splitting			
SP100	FP	TP	SP100 FP TP			
-	Х	Х	0%	50%	50%	
х	-	-	100%	0%	0%	
-	-	Х	0%	0%	100%	

#### Variant 4:

Active ports			Beam splitting			
SP80	FP	TP	SP80 FP TP			
-	Х	Х	0%	50%	50%	
х	x	х	80%	10%	10%	
х	-	х	80%	0%	20%	
-	-	Х	0%	0%	100%	

#### Variant 5:

Active ports			Beam splitting				
SP80	ВР	TP	SP80 BP TP				
-	Х	-	0%	100%	0%		
х	X	-	80%	20%	0%		
х	-	Х	80%	0%	20%		
-	-	Х	0%	0%	100%		

77

# Operation of objectives

#### Immersion objectives

OIL: Only use DIN/ISO standard immersion oil.



#### Attention:

Observe the safety information on the immersion oil!

**W**: Water immersion. The special water immersion objectives with ceramic front part can be used for all hydrous solutions.

**IMM:** Universal objective for water, glycerine and oil.

#### Colour coding of objectives

 $\rightarrow \ \ \text{``Performance parameters''}.$ 

#### Locking objectives

Some immersion objectives (with knurled grip) can be locked in a shorter position. This prevents any remaining drops of immersion liquid from wetting other objectives or specimens when the nosepiece is turned.

- Press up the front part by about 2 mm.
- Lock the objective in this position by rotating slightly.

### • Attention:

When using the immersion objective again, remember to release the lock, as otherwise the spring mechanism that protects the specimen and objective will not work and the other objectives will no longer be parfocal with the immersion objective.

#### **CORR** objectives

These are special objectives which can be adjusted to the thickness of the coverslip.

- Roughly set the correction mount to a medium or estimated value by turning the knurl.
- · Focus the specimen.
- Adjust the correction mount until you obtain obtimum contrast, fine-tune the focus with the fine drive if necessary. This setting may be very difficult for featureless or low-contrast areas of the specimen.

Objective lettering → p.121ff

# Operation of transmitted light

#### **Brightfield illumination**

Illumination techniques where the empty areas of the specimen are the brightest parts are called brightfield. Absorbing specimen structures are required for brightfield imaging, i.e. most specimens will need staining. Alternatives are optical contrasting techniques such as phase or modulation contrast.

#### Setting the condenser

On the TL illumination column there are height markings – S70, S23 and S1 – (13.3) for setting the correct condenser height. Using the supplied hexagonal screwdriver, slacken the screw (14.1) and adjust the height of the condenser or condenser holder until its upper edge coincides with the corresponding condenser height marking on the illumination column. Retighten the condenser or condenser holder fixing screw.

#### Setting the aperture diaphragm

The aperture diaphragm determines the lateral resolution, field depth and contrast of the microscope image. The best contrast is obtained when the apertures of the objective and the condenser are roughly the same.

When the aperture diaphragm is stopped down to be smaller than the objective aperture, resolving power is reduced, but the contrast is enhanced. A noticeable reduction in the resolving power is observed when the aperture diaphragm is stopped down to less than 0.6x of the objective aperture and should be avoided where possible.

### Brightfield illumination with condenser 0.30 S70

Brightfield illumination is possible with objective magnifications of 2.5x to 40x.

Turn a 10x objective into the light path and focus the specimen with the coarse and fine drive. Narrow the aperture diaphragm until you obtain the desired image contrast.

There is no field diaphragm for this condenser.

### Brightfield illumination with condensers 0.53 S23 and 0.90 S1

Brightfield illumination is possible with condenser 0.53 S23 with objective magnifications from 5x to 100x, and with condenser 0.90 S1 from 10x to 100x. A P 1.40 OIL S1 condenser top is available for extremely high resolution.

The supplied field diaphragm is secured to the transmitted light illumination column with the hexagonal screwdriver (Fig. 71.6, p. 80).

#### **Setting Koehler illumination**

#### (only for condenser S1, S23 possible)

Turn a 10x objective into the light path and focus the specimen.

- Engage the condenser disc into the "H" = Hellfeld = brightfield position if necessary.
- · Close the field diaphragm.
- Adjust the height of the condenser until the edge of the field diaphragm is sharply in focus and also:

Centre the image of the field diaphragm in the middle of the field of view with the two centring screws.


Open the field diaphragm until it just disappears from the field of view.

When objectives are changed, the condenser centration may have to be slightly adjusted with the knurled screws and the field diaphragm reset.

The field diaphragm protects the specimen against unnecessary heat and keeps all light not required for imaging away from the specimen, thereby enhancing contrast.

#### Fig. 70 Koehler illumination

a Field diaphragm closed, not focused, not centred, b Field diaphragm focused, but not centred, c Field diaphragm focused and centred, but diameter too small, d Diameter of field diaphragm = diameter of field of view (Koehler Illumination)

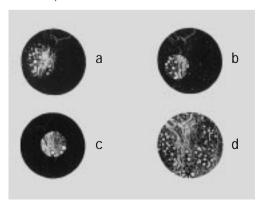

Therefore it is only opened wide enough to just illuminate the observed or photographed object field. A change in magnification always necessitates adjustment of the field diaphragm.


 Narrow the aperture diaphragm until you obtain the desired image contrast.



The aperture diaphragm determines the lateral resolution, field depth and contrast of the microscope image. The best contrast is obtained when the apertures of the objective and the condenser are roughly the same.

#### Fig. 71

1 Binocular observation and phototube, 2 Tube clamp screw, 3 Objective nosepiece, sextuple, 4 Clamp screw for SLR/TV adapter, front port, 5 Transmitted light lamphousing, 6 Transmitted light illumination column, 7 Condenser holder, 8 Condenser 0.53 S23 with disc, 9 Screw for opening lamphousing 105, 10 Lamphousing 105, 11 Adjustment wheel for tube lens 1x, 1.5x or Bertrand lens (B), 12 Beamsplitter switch rods, 13 Coarse and fine focus

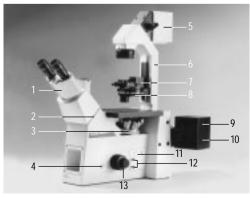

Visual comparison of the objective and condenser apertures is done as follows: remove an eyepiece from the eyepiece tube, or engage the Bertrand lens by turning the knurled wheel (71.11), (pos. B) and focus with the lever (71.11). Close or open the aperture diaphragm until the image just shows up in the pupil (= brighter circle) of the objective. This is regarded as the standard setting, i.e. condenser aperture = objective aperture.

Replace the eyepiece or disengage the Bertrand lens.

For low-contrast specimens, the aperture diaphragm can be narrowed further for clearer imaging of fainter structures. In polarisation microscopy, narrowing the aperture diaphragm usually results in stronger colours.



#### Attention:

The aperture diaphragm in the **illumination light path** is **not** for adjusting image intensity. Only use the brightness adjustment knob or neutral density filters for this.

An aperture diaphragm in the **objective** is normally opened fully. Narrowing it reduces the intensity and

increases field depth reduces coverslip sensitivity creates a darkfield impression alters contrast

#### Possible errors

Wrong coverslip thickness or wrong objective. Specimen with coverslip at the top instead of the bottom.

Aperture diaphragm opened too far or closed.

Condenser at wrong height.

Light ring switched in by mistake.

Dirty optics.

# Operation of phase contrast

#### Phase contrast observation

Like transmitted light darkfield and transmitted light interference contrast, phase contrast is used to produce high-contrast images of unstained specimens.

#### Setting phase contrast with condenser 0.30 S70

Phase contrast observation is possible with objective magnifications from 5x to 40x.

Turn a phase contrast objective (engraving e.g. PH2) of the lowest magnification into the light path and focus the specimen. If it is difficult to find the focal plane: temporarily narrow the aperture diaphragm or use a stained specimen and switch the disc to pos. H (= brightfield).

Set the light ring (73.2) in the condenser disc that corresponds to the objective engraving (PH2).

Swing the Bertrand lens into the light path (= Pos. B) by turning the knurled wheel (71.11,p. 80) and focus the phase ring (72.a) with the black slide on the knurl.

Insert the two supplied centring keys into the openings of the disc on the left and right of the label plate (e.g. 3) (73.2) and turn them until the dark ring (phase ring in the objective) coincides with the slightly narrower ring (light ring in condenser) (72c).

Then repeat the centration process for the other objective/light ring combinations. Disengage the Bertrand lens, pos. 1x.

Fig. 72 Centration for phase contrast, viewing with a Bertrand lens

a Condenser in brightfield position (H),  ${\bf b}$  Condenser in PH position, light ring LR not centred,  ${\bf c}$  Light ring and phase ring centred


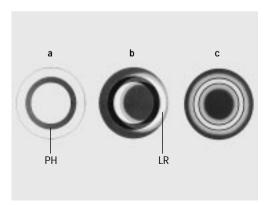


Fig. 73 Centration process for phase contrast/DF1 Centring keys in working position, 2 Disc

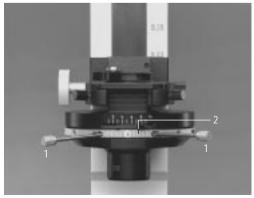

### Setting phase contrast with condensers 0.53 S23 and 0.90 S1

Phase contrast observation is possible with condenser 0.53 S23 with objective magnifications from 5x to 100x, with condenser 0.90 S1 from 10x to 100x.

For both condensers, phase contrast is set as described as for the 0.30 S70 condenser. However, before the centration process itself, correct Koehler illumination must be set.

#### Possible errors

Specimen: too thick, too thin, staining too intense; refractive index of mounting medium and specimen identical, so there is no phase jump.

Specimen slide too thick, so Koehler illumination not possible.



Wedge-shaped coverglass position, so centration of light and phase ring is no longer effective.

Wrong light ring, or light ring has been put in the disc upside down.

Aperture diaphragm not open.

Light ring not centred.

Wrong light ring.

# Operation of transmitted light darkfield

#### Darkfield observation

Darkfield observation is not possible with condenser 0.30 S70, with condenser 0.53 S23 it is possible from 5x objective magnification, the max. usable objective aperture is 0.40. With condenser 0.90 S1, DF observation is possible from objective magnification 10x, the max. usable objective aperture is 0.75.

Objectives with higher apertures can be used if it is possible to reduce the aperture with a built-in iris diaphragm. These objectives can be recognised by the fact that the maximum and minimum apertures are given in the objective engraving and in our lists, e. g. 1.30 – 0.60.

Rotate the condenser disc to the H position (= brightfield). Focus the specimen (5x/10x objective). If the specimen plane is difficult to find, temporarily close the aperture diaphragm. Set Koehler illumination, open the aperture diaphragm as far as the stop (= pos. PH) and turn the disc to position D (= darkfield diaphragm).

If the specimen does not appear against a dark background, centre the DF diaphragm with the centring keys. To do this, insert them in the openings in the disc on the left and right of the label plate for the DF diaphragm (D) (73.2) and rotate until a homogeneous dark specimen background is produced.

# Operation of transmitted light polarisation

#### DL polarisation

Polarisation contrast for examining birefringent specimens is possible with condenser 0.30 S70 with objective magnifications from 2.5x to 40x, with condensers 0.53 S23 or 0.90 S1 from 5x or 10x to 100x. A P 1.40 OIL S1 condenser top is also available for extremely high resolution.

#### Crossing the polarisers

First: Set Koehler illumination. Remove the speci-men from the light path; remove the Bertrand lens and fluorescence filter cube if necessary; turn the condenser disc and turret for objective-side IC prisms to pos. H. Insert the polariser into the filter holder with the engraving facing upwards. Turn the filter holder to the right into the light path.

Push the analyser into the 2nd clickstop position in the microscope with the engraving ICT facing upwards.

Set the optimum extinction position by rotating the polariser and watching the empty field of view. Put a specimen on the stage.

For Pol colour contrast, the ICT analyser can be turned over, with the lambda engraving facing upwards, to activate a whole-wave compensator.

# Operation of transmitted light interference contrast

#### TL interference contrast

TL interference contrast observation is possible with condenser 0.30 S70 with objective magnifications from 10x to 40x, with condensers 0.53 S23 or 0.90 S1 from 10x to 100x. For objective 100x there is also a condenser top P 1.40 OIL S1 for extremely high resolution.

#### Crossing the polarisers

Remove the Bertrand lens and fluorescence filter cube from the light path if necessary; turn the condenser disc and turret for objective-side IC prisms to pos. H. Focus the specimen (20x objective). Set Koehler illumination exactly (not needed for condenser 0.30 S70). Remove the specimen from the light path.

Insert a polariser into the filter holder with the engraving facing upwards.

Turn the filter holder to the right into the light path.

Push the analyser into the 2nd clickstop position in the microscope with the engraving ICT facing upwards.

Set the optimum extinction position by rotating the polariser and watching the empty field of view

Put on a specimen.

#### Centration of the condenser prisms

If you have ordered a complete microscope, this adjustment will already have been made at the factory. However, it is advisable to check the centration from time to time, particularly after transport: disengage the objective-side IC prisms (pos. H).

Remove an eyepiece from the eyepiece tube. Engage the condenser-side IC prisms one after the other (the whole-wave compensator must not be active, i. e. the lambda engraving is on the bottom side of the analyser). When the centration is correct, the dark stripe must be in the centre of the pupil (= brighter circle) of the objective (Fig. 74).

#### If not, proceed as follows:


Put one of the supplied centring keys in the disc opening on the <u>left</u> of the label plate for the IC prism (e.g. 73.2, p. 82) (Fig. 74) and turn it to centre the stripe.

#### **Objectives for ICT**

Transmitted light interference contrast is possible with the brightfield and phase contrast objectives which have the code letter of the pupil position in the first line of engraving, e.g. A (see separate objective chart).

An IC condenser prism, e.g. K6, must also be available for the objective. An up-to-date table of possible prism combinations (objective chart) is enclosed separately with each configuration.

Fig. 74
Objective pupil with correctly centred compensation stripe

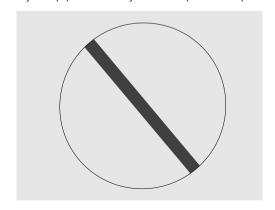

**Fig. 75** Centration for interference contrast 1 Centring keys in working position



#### Choice of prisms

Choose the objective-side prism with the letter indicated in the top line of the objective engraving, e.g. C for pupil position C, by rotating the turret.

Choose the condenser-side prism that corresponds to the magnification of the objective used, e.g. pos. 40 for objective 40x, by rotating the disc.

#### Setting ICT contrast

Turn the objective-side prism turret to the left and right (Fig. 76). Also adjust the contrast with the aperture diaphragm. Optimum contrast for specimens with parallel structures can be obtained by rotating the specimen. Colour contrast: Turn over the analyser, so that the lambda sign can be seen on the top.

### Sources of error if ICT image quality is unsatisfactory

Embedding medium, specimen slide (petri dish) or specimens (e.g. crystals, fibres) are of birefringent material. The phase shifts caused by birefringence disturb the interference contrast image. This can sometimes be remedied by rotating the specimen.

Fig. 76 Setting ICT contrast



# Operation of incident light fluorescence



n.b.:

Only with microscope with integrated incident light fluorescence axis.

#### Fluorescence observation

Focus the specimen in transmitted light first, if possible (perhaps Phaco or ICT).

Select a filter cube to suit the excitation and emission spectrum of the specimen and move into the light path by rotating the turret (fig. 26, p. 29). Open the iris diaphragm of the objective. Switch the magnification changer\* (on the DM IRB-SLR and DM IRE2 versions) by turning the knurl to pos. 1x. Switch off the transmitted light illumination using the brightment adjustment (p. 69, 63b.8).

Open the incident light path. The switch rod should be pulled out fully (p. 69, 63b.11).

If the background is too red, engage a BG 38 filter. Push the switch rod in halfway.

The BG 38 filter should always be used for photography.

When not looking through the microscope, always block the incident light path to prevent specimens fading. Push the switch rod in all the way.

The 3 clickstop positions of the switch rod (p. 69, 63b.11) mean:

Switch rod

Stop 
☐ Incident light path blocked (light stop)

BG 38 ☐ BG 38 engaged
☐ Incident light path open

#### Centration of the 12 V 100 W, Hg, Xe lamps

#### Lamphousing 107/2 for 12 V 100 W halogen lamp

This lamphousing is permanently set and does not require centration. However, it is essential that the lamp is aligned straight in its mount.

### Lamphousing 107 L for 12 V 100 W halogen lamp (Fig. 77)

3 alternative centration methods:

#### Method 1: Centration with a centring aid


On the right side of the microscope there is an adjustment window showing an image of the light source. The reflector for lamp adjustment is inserted in the filter turret instead of a filter cube and turned into the light path.

Centre the lamp as described for method 2 while watching the light source in the adjustment window.

Fig. 77 Lamphousing 107 L

1 Cover fixing screws, 2 Screw for horizontal adjustment,

3 Screw for vertical adjustment, 4 Collector focusing

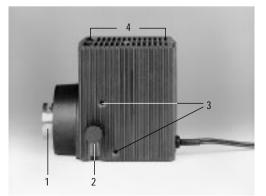

#### Method 2: Centration in the rear focal plane of the objective

- Turn a low-power objective into the light path and, using the BF reflector, focus on a strongly reflecting specimen (e.g. surface mirror) with the coarse and fine drive. Open the field and aperture diaphragm (81.1 + 81.3).
- 2. Remove the eyepiece from the right or left tube and look into the empty eyepiece tube.
- 3. Slightly reduce the light intensity until the back objective pupil (back lens surface of the objective) can be clearly seen.
- 4. Adjust the lamp collector (77.4) until you see the structure of the lamp filament.

The filament image is divided into two with a pale stripe in the middle (Fig. 78).

Please note that only the central area of the filament can be seen and that the image is very low in contrast.

Fig. 78 Lamphousing 107/2 and 107 L

Reflection of the lamp filament (greatly schematized): the reflection is actually very low in contrast, the pale overlap area is wider and more blurred. For lamphousing 106 z the reflection is rotated by 90°.




- Using an Allen key, adjust the screw for horizontal adjustment (77.3) until the pale stripe of the filament image is in the centre of the pupil.
- Then adjust the screw for vertical adjustment (77.2) to align the filament image vertically in the centre of the pupil.

#### Method 3: Centration in the plane of the specimen stage

- Put a piece of paper or non-shiny piece of Leica packaging on the specimen stage and roughly focus the surface with a low-magnification objective.
- 2. Set the field and aperture diaphragms at the middle position.
- Make a dot or cross on the centration area with a felt or ball point pen and slide it into the centre of the spot of light. Fix with the specimen clip if necessary.
- 4. Screw out the objective or turn an empty nosepiece position into the light path.

Fig. 79 Lamphousing 106 z with Hg 100 W lamp 1 Lamp adjustment, vertical, 2 Reflector adjustment, vertical, 3 Focusing of the reflector image, 4 Reflector adjustment, horizontal, 5 Lamp adjustment, horizontal, 6 Collector focusing, 7 Cover fixing screw

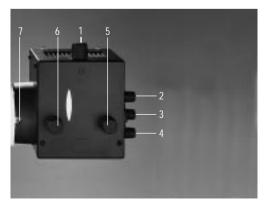

 Using the centring screws, slide the image of the filament into the middle of the centration area marked with a dot or cross, as described in Method 2

#### Lamphousing 106 z L with halogen lamp, Xe and Hg lamps

(switch gas discharge lamps on and off at separate power units)

For lamphousing 106 z the direct lamp image and the reflection of the reflector are focused separately and aligned to each other.

Either of the above methods can be used for imaging the lamp filament or arc.

#### Centration of 12 V 100 W halogen lamp

Move the reflection of the filament to the side or entirely out of the light path by adjusting the centring screws on the back of the lamphousing (79.5, 80). Focus the direct image of the filament with the collector adjustment (79.1)

Then, using the centring buttons, adjust the image of the filament until the centration area or rear focal plane of the objective is half filled (Fig. 80b).

Then focus the reflection of the filament with the centring buttons for the reflector adjustment and align symmetrically to the direct image (Fig. 80c).



Attention:

Never look straight into the light path! Remember the risk of glare when switching to the BF or Smith reflector!

#### Centration of Xe or Hg gas discharge lamps

Move the reflection of the discharge arc to the side or entirely out of the light path by adjusting the centring screws on the back of the lamphousing (79.2, 79.3, 79.4).

Focus the direct image of the arc with the collector adjustment (79.6).



Attention:

Use the neutral density filter to reduce the intensity of the discharge arc image on the centration areas due to the risk of glare damaging the eyes.

Centre the arc images as follows:

#### Hg 50 W mercury lamp

Using the centring buttons (79.1, 79.5) move the direct image of the arc to the right or left of an imaginary line through the middle of the centration area. Then focus the reflection (79.3) and, using the centring buttons of the mirror adjustment (79.2, 79.4), move the reflection until it is symmetrical with the direct image (Fig. 80c).

#### Hg 100 W and Xe 75 W lamps

Using the centring buttons (79.1, 79.5) move the direct image of the arc to the middle of the centration area, with the bright tip of the arc, the focal spot of the cathode, just off centre.

Then focus the reflection (79.3) and, using the centring buttons of the reflector adjustment, move the reflection until it is symmetrical with the direct image (Fig. 80a, b, c).

The V-shaped emissions of the arcs of the direct image and the reflection can be superimposed.



#### Attention:

The bright tip of the light arcs, the focal spots of the cathode, must never be projected on top of one another, as there is then a risk of explosion due to overheating.


Replace spent burners in good time and dispose of in an environmentally compatible way.

Open lamphousing only after cooling and disconnection from the mains.

Wear gloves and mask if using Xe lamps.

Hg lamps will reach their full intensity only after a few minutes, they do not ignite when hot.

Fig. 80
Schematic diagram of the lamp centration in lamphousing 106 z (in reality the lamp images are not as sharp) a direct lamp image, focused, but decentred b direct lamp image in correct position

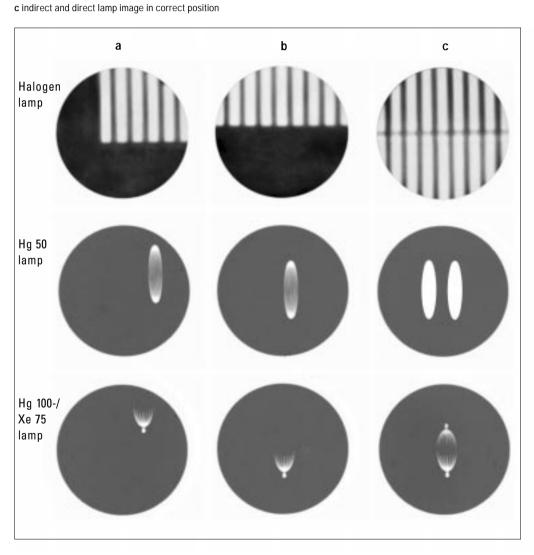

#### Centring the aperture diaphragm

Turn a low to medium objective magnification 10x/20x into the light path and focus a specimen with the coarse and fine drive.

Remove an eyepiece from one of the two eyepiece tubes and look into the empty tube or move the Bertrand lens into the light path.

Regulate the light intensity so that the rear objective pupil (rear lens surface of the objective) can be clearly seen.


Using the adjustment button (81.1), open the aperture diaphragm nearly to the edge of the pupil.

Centre the aperture diaphragm to the edge of the pupil with the centring screws (81.2).

The aperture diaphragm influences the resolution, contrast and field depth of the microscope image. Image quality greatly depends on how carefully it is set. It may not be used for regulating the image intensity.

#### Fig. 81 Aperture and field diaphragm

1 Aperture diaphragm adjustment, 2 Aperture diaphragm centring screws, 3 Field diaphragm adjustment, 4 Field diaphragm centring screws

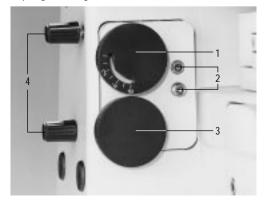

#### Centring the field diaphragm

Turn a low to medium objective magnification 10x/20x into the light path and focus a specimen with the coarse and fine drive.

Open the field diaphragm almost as far as the edge of the field of view.

Using the centring buttons (81.4), centre the field diaphragm to the edge of the field of view.

The field diaphragm is imaged on the surface of the specimen, framing the illuminated field. Normally, the field diaphragm is opened until it just disappears out of the field of view.

When imaging reduced picture diagonals such as in photomicrography or TV microscopy, the field diaphragm can be narrowed to frame the picture format, enhancing the image contrast. The aperture diameter of the field diaphragm remains the same for all objective magnifications.

#### Possible errors

Weak fluorescence, insufficient brightness:

Wrongly stored, overaged or faded specimens.

Fast fading of the specimens (e.g. for FITC).

Unspecified filter combination.

Numerical aperture of the objective too low.

Eyepiece magnification too high.

Spent lamp.

Room too bright.



Trinocular tube: wrong beamsplitter setting.

Stray light due to reflections at the condenser.

Low-contrast image due to:

Excitation bandwidth too wide.

Inspecific staining.

Fluorescing mounting medium.

Autofluorescence of objectives not suitable for UV or autofluorescence of the immersion oil.

Glass surfaces dirty.

# Operation of filters

#### Light filters

Up to max. 3 light filters can be inserted in the filter holder (1.16). They can be switched in and out the light path as required.

Filter	Use
Grey filter	Grey filters (neutral density filters) are used to attenuate the light without influencing the colour temperature. The engraved value, e. g. N16, indicates the attenuation value. So N16 means reduction to $1/16 = 6.3\%$ transmission.
Green filter, panchromatic	for general enhancement of contrast in black-and-white photography.
DLF	Conversion filter for colour photography with daylight film.
ALF	Enhances contrast for colour photography with artificial light film.
VG9 (green filter )	Contrast enhancement for chromosome photography.

# Operation of the slide overlay device

#### Slide overlay device

The slide overlay device is used for reflecting measurement and comparison patterns,  $\mu$ m marks, marker arrow, company logo and quality data etc. into the microscope image so they appear on the photograph.

Slides with the following line patterns are available:

Marker arrow
Measurement
scale 10 mm = 100 divisions
µm marks for 2.5x – 100x objectives
10 x 10 mm grid division

You can make your own masks with any measurement and comparison line patterns, quality data, company logos, etc.

The original master has to be copied on a 35 mm negative, i. e. white line patterns on a dark background, preferably using fine-grain document film, and then framed in a customary 50 x 50 mm slide frame.

The original is imaged 2:1 in the intermediate image plane of the microscope. A distance of e.g. 5 mm in the slide overlay is enlarged to 10 mm in the intermediate image plane of the microscope.

The overlay is only possible in beamsplitter position 50/50 (switch rod) in the middle position of the tube (FSA 25 PE).

The framed slide is inserted in the fitted slide holder (83.6), with the lettering on the white side of the slide facing the lamp.

The slide holder can be adjusted on all sides, so that the overlay can be positioned anywhere in the microscope image. Remember that when you move the slide, the overlay in the image will move in the opposite direction. This takes a bit of getting used to.

The white line pattern can be given a coloured background by inserting 32 mm colour filters in the filter slot (83.7).

### Operation of the macro device

Like the slide overlay device, the macro overlay (Fig. 82) only works in the 50/50 beamsplitter position (switch rod in middle position) of the FSA 25 PE tube.

The microscope illumination is left switched off to avoid disturbing image brightening.


The object is placed on the stage under the mirror housing of the macrodual zoom (82.11) and illuminated.

Stand lamps, cold-light illuminators and fibreoptic lamps, etc. are suitable sources for microscopy.

The image is observed in the microscope tube and focused by turning the knurled ring (82.10). The magnification can be changed continuously in a range of 1:4 by adjusting the zoom ring (82.7).

When changing the magnification with the zoom control the image has to be slightly refocused with the knurled ring (82.10). The zoom magnification factors can be read on the scale (82.8). The magnification also changes when the distance between the object and the macro attachment is varied.

Fig. 82 Macro device on FSA 25 PE tube with tube adapter 1 Tube flange, 2 Coupling ring, 3 Reflection optics, 4 Coupling ring, 5 Macro adapter, 6 Screw ring, 7 Zoom setting ring 1:4, 8 Scale of zoom factor, 9 Scale of magnification factor of the working distance, 10 Scale of object distance from the bottom edge of the mirror housing, 11 Mirror housing

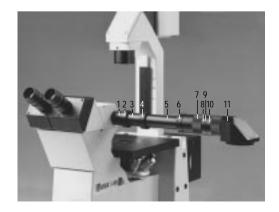

The total magnification in the microscope, the reproduction ratio on the photograph or TV image can be quickly and easily measured with a scale and calculated.

<u>n.b.</u>: For normal viewing without the macro mirrorhousing or macrodual zoom, put on the cover to avoid disturbing overlay effects.

The mirror housing (82.11) can be rotated through 360°, for example to alter the angle at which the photograph is taken. This is done by loosening the Allen screw.

The intermediate image magnification  $M_1$  of the macro object can be worked out from the eyepiece field of view and the diameter of the object field (measured with a graduated ruler) as follows:

$$M_1 = \frac{\text{field of view } \emptyset}{\text{object field } \emptyset} \text{ e.g. } \frac{10x/20 \text{ eyepiece}}{\text{object field = 200 mm}} M = 0.1$$

Viewed with a 10x eyepiece, this intermediate image of 0.1x gives a total magnification of 1x in the microscope eyepiece  $(0.1 \times 10 = 1x)$ .

The total magnification of the film plane of a camera is derived from multiplying the intermediate image magnification  $M_1$  by the magnifications of the photo eyepiece and camera attachment, e.g.: intermediate image magnification 0.1x photo projection lens 10x

camera factor 35 mm 0.32x

 $0.1 \times 10 \times 0.32 = 0.32 \times 0.32 \times 0.00 \times 0.00 = 0.00 \times 0.0$ 

Fig. 83
Slide overlay on the FSA 25 PE tube (with tube adapter)
1 Tube flange, 2 Coupling ring of reflection optics, 3 Reflection optics, 4 Coupling ring of slide overlay device, 5 Knurled focusing ring, 6 5 x 5 cm slide holder, 7 Filter slot, 8 Illumination adapter of lamphousing

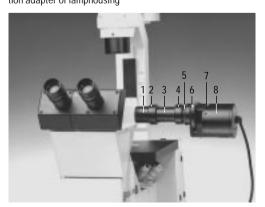


Fig. 84 Transformer



The total magnification can be roughly calculated with the scale divisions on the macrodual zoom:

The following factors have to be multiplied for this:

- Magnification factor of the working distance (scale (82.9), e. g. 0.11x)
- Zoom factor (scale (82.8), e.g. 1x)
- Correction factor of the reflection optics (without engraving 1.17x)
- Eyepiece magnification (e. g. 10x)
   e. g. 0.11 x 1 x 1.17 x 10 = 1.29

The total magnification in the eyepiece would therefore be 1.29x.

Use of the macrodual zoom as a drawing device
Drawing microstructures under the microscope
has the advantage over photomicrography that
significant details can be highlighted and that
structures can be depicted in three dimensions.
This is not possible with photomicrography.
Apart from this, drawing with the superimposed
image method is a valuable didactic exercise.

It is done by superimposing the drawing area (the area of the stage under the mirror housing of the macrodual zoom) onto the microscope image. The drawing area or sheet of paper is homogeneously illuminated with a stand lamp or table lamp.

The microscope illumination and illumination of the drawing area are matched providing the lamps are adjustable; otherwise the brightness of the drawing area can be varied by altering the proximity of the lamp.

#### Length measurements

The following components are required for length measurements:

- Graticule with scale in eyepiece (Fig. 85) or in the slide overlay device (Fig. 83).
- Transmitted light stage micrometer for calibration.

Before measurement, the <u>micrometer value</u> of the objective/eyepiece combination must be known, i.e. the distance in the specimen that corresponds to a scale interval in the graticule you are using.

#### Calibration:

Align the stage micrometer and the graticule parallel to one another by rotating the eyepiece and adjust the zero marks of the two scales to exactly the same height (Fig. 85).

Read how many scale divisions of the stage micrometer correspond to how many on the microscope scale (graticule) and divide the two values.

#### Example:

If 1.220 mm of the stage micrometer corresponds to 100 divisions of the measurement scale, the micrometer value is = 1.220:100 = 0.0122 mm = 12.2  $\mu$ m. For extremely low objective magnifications it may be that only part of the measurement scale can be used for calibration.

<u>Important:</u> If using a magnification changer\* (DM IRB-SLR and DM IRE2 stands):

Remember to take the additional magnification value into consideration separately instead of extrapolating the micrometer values of the other objectives from the calibration of one objective. Measurement errors may occur if the eyepiece is not pushed into the tube as far as the stop.


### Connections for TV cameras and photomicro equipment

All the variants of the Leica DM IRB stand have a photo/TV exit on the left side.

Leica DM IRB microscopes can also be fitted with either a front or bottom port. With the electonic version, Leica DM IRE2, there is the possibility of integrating a bottom port in addition.

There are also photo/TV exits in the trinocular tubes for vertical adaption of camera systems.


Fig. 85 Graticule scale in the eyepiece (left) and image of the stage micrometer (right)

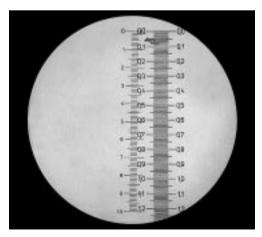

Various adapters are available for connecting TV cameras with c-mount or B-mount objective thread:

	Recorded 1-inch- camera	picture dia 2/3-inch- camera	gonal in mr 1/2-inch- camera			
without zoom magnification, only for 1-chip-cameras:						
c-mount-adapter 1 x HC	16	11	8	6		
c-mount-adapter 0.63 x HC	-	17.5	12.7	9.5		
c-mount-adapter 0.5 x HC	-	-	16	12		
c-mount-adapter 0.35 x HC	-	-	-	17.1		
with zoom magnification (Vario TV adapter), for 1-3 chip-cameras: c-mount, 0.32-1.6 x HC						
without zoom magnification, for 1-3 chip-cameras	<b>:</b> :					
c-mount-adapter 1 x	-	-	16	12		
B-mount-adapter 1 x	-	-	16	12		
B-mount-adapter 1.25 x	-	17.5	-	-		
F-mount-adapter 1 x	-	-	16	12		
F-mount-adapter 1.25 x	-	17.5	-	-		
TV-optics 0.5 x HC required!						

Fig. 86 C-mount adapter on side port
1 TV camera, 2 Adapter with c-mount thread (or B-mount bayonet), 3 Clamp screw, 4 Photo adapter tube

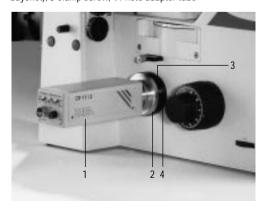

#### Calculation of the magnification on the monitor

For all TV exits the magnification on the monitor can be calculated with the following formula:

 $M_{\text{TV}}$  = objective magnification x tube factor x TV monitor diameter adapter magnification  $^{X}$   $\frac{\text{monitor diameter}}{\text{chip diameter of camera}}$ 

### Beamsplitting for photomicrography or TV microscopy

<u>DM IRB with side photo port only</u> and correspondingly with one beamsplitter switch rod (90.1).

- Image recording via phototube:
   Switch rod pushed in = 100 % light to the tube (91.1).
- Image recording via side photo port:
   Switch rod pulled out = 80% light to the side port and 20% light to the tube (91.2).

<u>DMIRB with side photo port and front port</u> (<u>DMIRB-SLR</u>) and correspondingly two beam-splitter switch rods (90.1 and 90.2).

Image recording via phototube and/or side port:

Bottom switch rod (90.2) pushed in (91.3 and 91.4).

Push top switch rod (90.1) in if you want 100% of the light to go to the tube.

Pull top switch rod out if you want 80% of the light to go to the side port and 20% to the tube.

 Image recording via front port\* (SLR/TV) and phototube:

Upper switch rod (90.1) pushed in, lower switch rod (90.2) pulled out = 50% light to the front port and 50% to the tube (91.5).

See also beamsplitting chart on page 77!

Fig. 87 Adaption of the front port for the SLR camera 1 SLR adapter, 2 T2 connector ring, 3 SLR camera



Fig. 88 Adaption of the front port for TV camera 1 TV adapter 0.63x, 2 TV camera with c-mount thread





#### n.b.:

#### Long-term video microscopy

The solid and therefore stable basic body of the stand takes a while to stabilise thermally after the microscope is switched on. For investigations taking over > 30 min. therefore, the microscope should be switched on about 1-2 hours beforehand.

Fig. 89 Leica DM IRB, equipped with three TV cameras



Fig. 90 Switch rods for beamsplitting Leica DM IRB 1 Upper beamsplitter switch rod (SIDE), 2 Lower beamsplitter switch rod (FRONT)


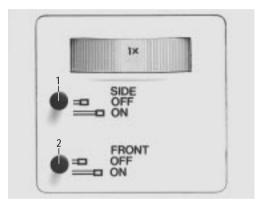


Fig. 91 Beamsplitting

1 100 % light to the tube, 2 80 % light to the side photo port, 20 % to the tube, 3 100 % light to the tube, 4 80 % light to the side photo port, 20 % to the tube, 5 50 % light to the front port, 50 % to the tube

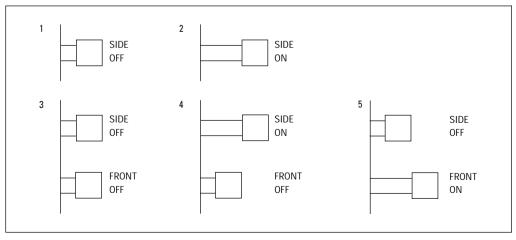

# Operation of LMC

Leica modulation contrast (LMC) is a special form of oblique illumination based on the principle of Hoffmann modulation contrast.

In this technique, the phase gradients of an unstained specimen are converted into differences in amplitude with the aid of a modulator.

This gives a three-dimensional impression similar to an interference contrast image. Unlike interference contrast, however, the specimen can be observed through birefringent plastic materials such as petri dishes.

Further advantages of this technique are:

- high contrast
- high resolution
- halo-free, high-contrast relief image
- long free working distance of the condenser
- easy assembly and adjustment
- use for both stained and unstained specimens.

# Principle of LMC

#### The principle

Leica modulation contrast (LMC) is based on the principle of Hoffmann modulation contrast.

This imaging technique is particularly suitable for unstained, colourless objects with little image contrast.

Such objects change the phase of the light when it passes through them.

The conversion of these phase gradients into differences in amplitude results in a three-dimensional image similar to that of differential interference contrast.

To realise this technique, a light slit diaphragm and an objective with integrated modulator are required. The modulator is a filter built into the rear focal plane which divides it into three zones, a dark zone, a grey zone and a light zone. The light coming from the light slit diaphragm is diffracted at the object into different directions, depending on the object's refractive index gradient, so that some of the rays have to pass through the light zone of the modulator and some through the dark zone. The non-diffracted direct light passes through the grey zone and produces the grey background of the entire field of view. Most of the rays diffracted at the object pass through the light zone and produce the image.

If the condenser is set at the "brightfield" position and the specimen is removed, the dark and the grey zone can be seen at the edge of the field of view. The image of the slit diaphragm is in the light zone. To adjust, the light slit diaphragm is rotated until the bright stripe of the slit image covers the grey stripe of the modulator.

# Components

#### The components

LMC consists of the following components:

#### S40/0.50 LMC condenser

The condenser (order no. 521225) is supplied with a condenser disc to accommodate 3 LMC diaphragms, plus two phase contrast light rings and a brightfield position (3x LMC, PH1, PH2, brightfield).

Adhesive labels are enclosed for labelling the individual positions.

In the front focal plane of the condenser a light slit diaphragm has already been assembled in each of the LMC positions, corresponding to the supplied objectives.

The LMC condenser does not need a field diaphragm and is therefore supplied without one.

#### LMC objectives

The following objectives are available:

C PLAN 10x/0.22 LMC C PLAN L 20x/0.30 LMC C PLAN L 40x/0.50 LMC N PLAN L 20x/0.40 CORR LMC N PLAN L 40x/0.55 CORR LMC PL Fluotar L 63 x/0.70 CORR LMC

In the rear focal plane of the objectives a special modulator, similar to the phase contrast rings, has been fitted.

When unpacking, check that you have all the components.

# Assembly/adjustment

#### Assembly

When taking the following steps, regard the notes about the assembly of the stand.



Before installing the LMC components, remove the field diaphragm. Also remove any filters, prisms and interference contrast components.

Screw the LMC objectives into the objective nosepiece.

Replace the condenser on the microscope with the S40/0.50 LMC condenser. First check that the inserted light slit diaphragms match the objectives in the nosepiece. The light slit diaphragms are labelled, for example, LMC 10, LMC 20 or LMC 40.

Example: **LMC 10** diaphragms belong to the C PLAN **10**x/0.22 **LMC** objective.

The light diaphragms are usually assembled at the factory to match the supplied objectives. If the light slit diaphragms are supplied separately, they must be inserted in the positions in the condenser disc to match the objectives used.

#### Adjustment

Open the aperture diaphragm on the condenser fully.

Switch on the light. Select a medium brightness setting.

Set the condenser to the **brightfield position** and turn the first LMC objective into the light path (usually the objective with the smallest magnification).

Engage the Bertrand lens using the adjustment wheel on the right side of the microscope.

You will now see the modulator built into the objective as a grey rectangle at the edge of the field of view. Its position (top, bottom, left, right) is not fixed and may vary for different objectives. Focus the image of the modulator using the Bertrand lens.

Turn the condenser to switch to the light slit diaphragm whose name corresponds to the engraving on the objective (e.g. LMV 10 for the C PLAN 10x objective).

You will now see a bright rectangle.

The light slit diaphragm is now adjusted until the bright stripe of the slit image is fully inside the grey stripe of the modulator. The light slit diaphragm can be rotated and moved in x and y direction.

For the 10x objective the image of the modulator and the light slit are virtually the same size. Adjust the light slit diaphragm until the bright slit lies near the dark edge.

Repeat this process for each objective.

Always make sure that the objective name and the name of the light slit diaphragm coincide.

Then disengage the Bertrand lens with the adjustment wheel on the right side of the microscope. Switch on magnification 1x or higher and put a specimen on the stage.

# Areas of application

On the Leica DM IRB or Leica DM IRE2 microscope, LMC is particularly suitable for life science applica-tions.

### Use of birefingent materials

Transparent, living cultures in petri dishes can be observed in three dimensions, for example.

#### Use of a micromanipulator

The long free working distance of the S40/0.50 LMC condenser offers plenty of space for manipulation tools. The 3D image impression makes it easier to find suitable injection points.

### Optical sectioning

LMC produces a large, flat observation area. This makes it easier to focus a specific area for observation.

#### Avoidance of halo effects

Phase contrast images are often spoiled by halo effects. These do not occur with LMC.

#### Use for fluorescing specimens

Morphology of fluorescing and non-fluorescing specimens can be analysed without changing the objective or moving the specimen.

# Care and maintenance



#### Attention:

Before cleaning and maintenance work, remember to disconnect from the mains!

Protect electric components from damp!

Microscopes in warm and humid climates need special care to keep them free of fungus.

The microscope should be cleaned every time it is used and the microscope ontics should be

is used and the microscope optics should be kept immaculately clean.

### **Dust protection**



#### n.b.:

Protect the microscope and peripherals from dust by putting on the flexible dust cover after each work session.

### Cleaning



#### Attention:

Fibre and dust residue can cause disturbing background fluorescence in fluorescence microscopy.

### Cleaning of lacquered components

Dust and loose particles of dirt can be removed with a soft brush or lint-free cotton cloth.

Obstinate dirt can be removed with any ordinary hydrous solution, benzine or alcohol.

Use a linen or leather cloth moistened with one of these substances to clean lacquered components.



#### Attention:

Do not use acetone, xylol or nitro dilution, which may damage the microscope.

Cleaning agents of unknown composition should be tested on an inconspicuous part of the microscope first. Lacquered or plastic surfaces must not be tarnished or etched.

### Cleaning the stage

Remove light spots on the stage by rubbing with paraffin oil or acid-free vaseline.

### Cleaning glass surfaces

Remove dust on glass surfaces with a fine, dry and grease-free hair brush, by blowing with a bellows ball or by vacuum suction.

Obstinate dirt on glass surfaces can be carefully removed with a clean cloth moistened with distilled water. If the dirt can still not be removed, pure alcohol, chloroform or benzine can be used instead of distilled water.

### Cleaning objectives



#### Attention:

Objectives should not be screwed apart for cleaning. If there are signs of interior damage, send the objectives to your nearest Leica agency for repair. We also advise against cleaning the inner surfaces of eyepieces.

The front lenses of objectives are cleaned as described under "Cleaning glass surfaces". The top lens is cleaned by blowing off the dust with a bellows ball.

#### Removal of immersion oil



#### Attention:

Read the safety information for immersion oil!

First wipe the immersion oil off with a clean cotton cloth and then wipe several times with ethyl alcolhol.

#### Acids, alkaline solutions

Particular care should be taken when working with acids or other aggressive chemicals.



#### Attention:

Always avoid direct contact between such chemicals and the optics or stands.

# **Troubleshooting**

All Leica instruments are manufactured and tested with extreme care. If you do have cause for complaint, however, please do not try to repair the instruments and their accessories yourself. Contact your national agency or our central servicing department, the Technical Service in Wetzlar, direct. Postal address:

Leica Microsystems Wetzlar GmbH

Abt. Technischer Service

Postfach 2040

D-35530 Wetzlar

Tel. (0) 64 41-29 28 49 Fax (0) 64 41-29 22 66

Email: MQM-Hotline@leica-microsystems.com

Apart from preparation errors (e.g. staining or wrong specimen vessel), which cannot be dealt with in this manual, there are two main categories of error:

Mechanical errors and electric errors.

#### Mechanical errors

We already mentioned possible mechanical errors in the "Installation" and "Operation" chapters.

These mainly involve errors in inserting contrasting equipment, maladjustment of light rings or the wrong condenser height setting.

We described all these possible errors in previous chapters.

Therefore, if you are not satisfied with the quality of the image, read the relevant sections of the manual.

#### Electric errors

These may be:

- 1. The lamp on the microscope does not work.
- 2. There is no power.

Check the following possible causes:

# The on/off switch does not respond (no illumination):

- Check that all mains cables are properly connected.
- Make sure that there is power at the sockets you are using and that they are not deactivated by a mains switch.
- After you have ruled out the possibility of all possible external sources of error, check that a fuse of the Leica DM IRB or Leica DM IRE2, the electronics box or the power unit is not defective.

Replacing the mains fuse on the microscope



Attention:

Call the Technical Service!

# The integrated transmitted light lamp does not respond.

- Make sure the plug of the lamp cable is firmly plugged into the corresponding socket on the back of the Leica DM IRB or Leica DM IRE2 stand.
- The halogen lamp may be faulty.

### Replacing the 12 V/100 W halogen lamp



#### Attention:

Remember to disconnect from the mains! Leave the protective cover on until the lamp is inserted. Avoid making fingermarks, or wipe off immediately.

- Switch off the microscope and the power unit (if used).
- Disconnect the appliance cable of the microscope and the power unit.
- Disconnect the transmitted light illumination column from the power supply on the back of the microscope.
- Screw off the lamphousing with a 3 mm Allen key.
- · Remove the faulty lamp.

- Insert the new lamp as far as it will go into the sockets of the lamp holder.
- Mount the lamphousing and screw down with a 3 mm Allen key.
- Reconnect the transmitted light illumination column to the power supply on the back of the stand.
- Connect the microscope and, if used, the power unit to the mains.

# The additional fluorescence lamp does not respond.

Make sure the cable connections lamp – power unit – mains are correct and complete.
 Possible causes for the failure of the fluorescence lamp are: a defect fuse of the power unit, a defect lamp or a defect burner in the lamphousing.

Fig. 92 Lamphousing for transmitted light illumination 1 Cover, 2 Cover screws


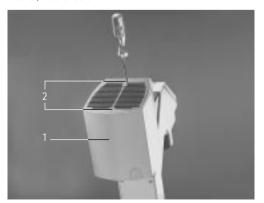


Fig. 93 Lamphousing for transmitted light illumination (cover removed)

1 Lamp holder (pin base) with 12 V 100 W halogen lamp, 2 Collector, 3 Heat protection filter



### Replacing the mains fuse on the power unit\*

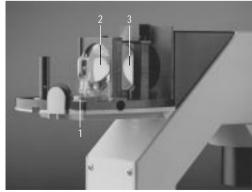

#### Attention:

### Remember to disconnect from the mains!

- Switch off the microscope and the power unit.
- Disconnect the appliance cable of the microscope and the power unit.
- Remove the defect fuse from the fuse holder.
   Replacement fuses of IEC 127-2 standard and/or UL 198 G and/or company type:

Part no.: 846-205.000-00

Name: T4A

Wickmann 19 195/ Schutter FST

Fig. 94 Lamphousing 107/2 1 Screw for opening the lamphousing

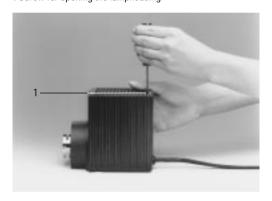


Fig. 95 Lamphousing 107/2, opened 1 Collector, 2 Holder with 12 V 100 W halogen lamp


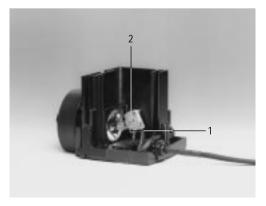


Fig. 96 Lamphousing 106, opened 1 Screw for opening the lamphousing, 2 Holder with 12 V 100 W halogen lamp, 3 Collector, 4 Diffusing disc



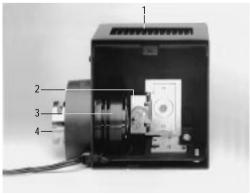

#### n.b.:

Never use fuses with a different rating from the ones specified.

 Connect the microscope and the power unit to the mains.

# Replacing the 12 V / 100 W halogen lamp in lamphousing 106, 107, 107/2

Ask a member of Leica field staff to show you how to change the halogen lamp properly. Here again are all the necessary steps:



#### Attention:

Always disconnect external transformers and the microscope from the mains when carrying out assembly work!

- Switch off the microscope and the power unit.
- Disconnect the appliance cable of the microscope and the power unit.
- Slacken the clamp screw on the microscope and remove the lamphousing.
- Slacken the screw (94.1) on the lid and remove the lid.
- Move the collector (93.3) to the front if necessary.



#### n.b.:

This step is not necessary with lamphousing 107/2.



1 Lid, flipped up, 2 Collector, 3 12 V 100 W halogen or gas discharge lamp, 4, 9 Screw holes for lid, 5 Reflector, 6, 8 x-y adjustment screws for centration of reflector, 7 Reflector focusing, 10 Fixing screws for lamp holder, 11 Socket for cutout plug

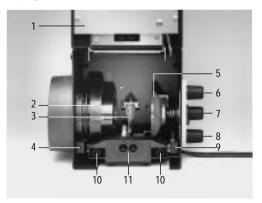


Fig. 98 12 V 100 W lamp holder





#### Attention:

Leave the protective cover on until the lamp is inserted. Avoid making fingermarks, or wipe off immediately.

- · Remove the defect lamp.
- Put a new 12 V 100 W halogen lamp into the lamp holder without tilting (95.2 or 96.2).
- · Move the collector back.
- Put on the lid and secure with screw (94.1 or 94.1).
- Align the lamphousing against the microscope and secure with the clamp screw.
- Connect the lamphousing to the power unit.

# Replacing the 12 V 100 W halogen lamp in lamphousing 106 z\*



#### Attention:

Always disconnect external transformers and the microscope from the mains when carrying out assembly work!

- Switch off the microscope and the power unit.
- Disconnect the appliance cable of the microscope and the power unit.
- Slacken the clamp screw on the microscope and remove the lamphousing.
- Slacken the screws (97.4 and 97.9) on the lid with a cross-tip screwdriver.
- Pull the cut-out plug slightly out of the socket (97.11) and flip up lid.



#### Attention:

Leave the protective cover on until the lamp is inserted. Avoid making fingermarks, or wipe off immediately.

- Slacken the fixing screws (97.10) on the lamp holder and pull out the lamp holder (Fig. 98).
- Remove the defect lamp.
- Put a new 12 V/100 W lamp into the lamp holder.
- Push in the lamp holder and secure it with the screws (97.10).
- Push the cut-out plug into the socket (97.11).
- Close the lid and tighten the screws (97.4 and 97.9) on the lid.
- Align the lamphousing against the microscope and secure with the clamp screw.
- Connect the lamphousing to the power unit.

# Changing the Hg and Xe lamps on lamphousing 106 z



#### Attention:

- Always disconnect the power unit from the mains before carrying out assembly work.
- Wait for the lamphousing to cool down for at least 15 minutes as otherwise it may explode.
- Never touch glass parts of the burner with your bare hands as finger perspiration burns in.
- Wipe off any finger perspiration and dirt carefully (perhaps using alcohol).
- · Adjust the lamps immediately after ignition.
- Avoid switching on and off frequently, as this greatly reduces the life and stability of the lamp. Do not ignite hot Hg lamps again until they have cooled down. It is advisable to let new burners burn in for a few hours without interruption.
- Ensure that lamphousing is adequately ventilated. Never block the air vents with paper, etc. (fire risk).
- It is best to keep a record of the number of hours a lamp has been in use and compare it with the manufacturer's specifications.
- We cannot accept any liability for damage resulting from lamp explosions.


- Disconnect the power unit and the microscope from the mains.
- The LH 106 z L is opened by undoing the fixing screws (97.4), pulling the cut-out plug slightly out the socket (97.11) and flipping up the lid of the lamphousing.
- Slacken the safety screws (97.10) and pull out the lamp holder (Fig. 99).
- Insert the burner as follows, making absolutely sure to observe the safety measures described above:
- If there is a plastic cover on the burner, leave it on for the time being.
- Insert the burner so that the lettering is upright after insertion (different diameters of the metal base for the Hg 100 and Xe 75 burners ensure that these are always inserted the right way up).
- If the bulb has a glass seal point (99.2), the burner is turned so that this point will be at the side, not in the light path.
- Put the upper pin of the burner between the clamps of the flexible power supply and clamp with screw (99.1).
- Unscrew the stud (99.4) in the holder slightly, insert the lower end of the metal base and retighten the stud.
- Remove the protective covering from the burner now.

- Put the lamp holder with burner inserted into the lamphousing and secure with the screws (99.10).
- Close the lid of the lamphousing. When closing the lamphousing, make sure that the pins of the cut-out plug engage in the sockets.
- · Retighten the screws of the lid.

- Push the cut-out plug in as far as it will go.
- Align the lamphousing against the microscope and secure with the clamp screw.
- Connect the lamphousing to the power unit (compare mains voltage!).

Fig. 99 Lamp holders for gas discharge lamps

1 Upper clamp, 2 Seal point of the burner, 3 Lower clamp, 4, 6 Drill holes for fixing the lamp holder, 5 Sockets for cut-out plug, 7 Protective cover

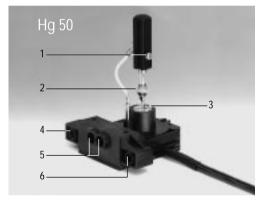







# Storage

# Packaging and transport

Protect your microscope from dust by putting on the cover after each work session.

The microscope must be kept in a cupboard in which the temperature is  $\geq 5^{\circ}\text{C}$  above room temperature. The cupboard must have ventilation holes which are plugged with cotton wool, for example, to keep dust out. If this type of storage is not possible, the microscope is kept in a closed container with drying agent (e. g. Silica gel).

The original packaging should be used if the microscope has to be dispatched or transported. Also, the delivery note with full details should be enclosed.

# Performance parameters

All techniques, not only in microscopy, are subject to limits of performance due to basic physical laws and principles of eye physiology. The following information should therefore be remembered when using the microscope.

### Performance data of objectives

The Leica DM IRB and Leica DM IRE2 microscope is based on tube length  $\infty$  (infinity) and a focal length of the tube lens of f = 200 mm.



n. b.:

Therefore, only objectives with the  $\infty$  engraving and M 25 screw thread may be used.

The current objective range is constantly being updated. Please ask your Leica agency for a copy of the "Objective data sheets"!

### **Objective lettering**

Examples and explanation of symbols:

∞ / -C PLAN 10x/0.22

∞ / 0.17 C PLAN 40x/0.65

 $\infty$ 

Objective for tube length infinity  $(\infty)$ .

-

The objective can be used with and without a coverslip.

#### 0 - 2

For use with coverslips with a thickness of 0-2 mm.

#### 0.1 - 1.3

For use with coverslips with a thickness of 0.1 - 1.3 mm.

#### 0.17

The objective may only be used with a coverslip of the standard thickness 0.17 mm. No coverslip or a coverslip with a very different thickness will greatly impair the image, particularly with high objective apertures (see below).

#### 0

Use **without** a coverslip, e.g. for cell smears, incident light. (Cannot be used for inverse microscopes).

### D (or A, B, C)

Pupil position of objective (important, e.g. for interference contrast).

### Objective type (performance class):

#### C Plan

Achromatic objective with particularly good price/performance ratio. Field performance max. 20 mm.

### N Plan

Achromatic objective with increased field performance of at least 20 mm.

#### PL FLUOTAR ®

Semiapochromats with particularly good field performance of at least 25 mm and chromatic correction. Universal optics for all techniques.

#### PL APO

Plan apochromats with a field performance of over 25 mm and maximum chromatic correction. The best objectives in the Leica range.

#### HC

Harmonic Components.

#### Χ

Universally applicable, also backwards compatible with Delta optics (= predecessors of HC optics).

#### L

Long working distance.

#### 10x/0.22

Magnification and aperture. The aperture (pick-up angle) influences resolution, field depth, contrast and brightness. Objectives with built-in iris diaphragm have an engraving showing the maximum and minimum aperture, e. q. 0.85 - 0.55.

### .

n.b.:

Objectives with built-in iris diaphragm.

The knurled ring may only be used for adjusting the diaphragm, **not** for screwing the objective in or out

Risk of damge!

#### OIL, W, IMM

Immersion objectives for oil, water, universal (oil, glycerine, water, etc.).

#### РΗ

PH = phase contrast objective, with additional indication of assigned light ring in condenser, e. q. PH2.

#### BD

BD = brightfield/darkfield; objectives for incident light microscopy with M 32 screw thread (not suitable for Leica DM IRB and Leica DM IRE2).

#### CORR

Correction mount for continuous adjustment to coverslip/specimen slides or thickness of vessel base.

#### P. POL

Strain-free objective for quantitative polarisation microscopy.

#### U-V-I

With special achromatic correction, i.e. parfocal from the **u**ltraviolet through the **v**isual to the near **i**nfrared range (from 340 nm to 1000 nm).

### Colour coding of the objectives

The magnification of each objective is indicated as per DIN/ISO standard by a colour ring:

100x 125x 150x 160x	63x	40x 50x	25x 32x	16x 20x	10x	6.3x	4x 5x	2.5x	1.6x
white	dark blue	light blue	dark green	light green	yellow	orange	red	brown	grey

Immersion objectives also have a second colour ring underneath:

Black Oil or IMM (= universal for oil,

water, glycerine)

White Water Orange Glycerine The different colour of the objective engraving indicates the use of the objective:

Black or Brightfield objectives,

dark blue low-strain

Green Phase contrast objectives,


low-strain

### Locking of objectives

The front part of immersion objectives (OIL, W, IMM) can be pushed up (100.1 and 100.2) by about 2 mm and locked in a shortened position by a slight rotary movement. This stops any remaining drops of immersion liquid from wetting specimens or other objectives when the nosepiece is turned.

Fig. 100 Immersion objectives

2 Oil immersion objectives (OIL), 1 in working position,
 locked in shortened position,
 Water immersion objective
 (W),
 Universal immersion objective (IMM) for water,
 glycerine, oil,
 Colour coding for immersion,
 Knurled ring for screwing down

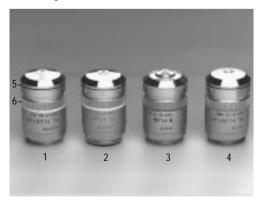

### Performance data of eyepieces

Leica eyepiece type	Magnification/ fov	Eyepiece port +)	
HC PLAN HC PLAN HC PLAN HC PLAN HC PLAN HC PLAN	10 x/20 10 x/20 12.5 x/16 10 x/20 10 x/22 11 x/20	१९९१११	M MF M MF

Eyepiece tube diameter: 30 mm

- +) = With re
  - With removable or push-back anti-glare protection for use with or without eyeglasses.
  - M = Ajustable eyelens (dioptre compensation) and slot for graticules of 26 mm diameter.
  - MF = With illuminated graticule.



The LEITZ PERIPLAN® eyepiece type may not be used! Earlier L PLAN type eypieces may only be used with earlier type tubes (before about 1988) without the HC engraving!

### Eyepiece field of view

Each microscope configuration has a certain eyepiece field of view (see below), e.g. 20, which must not be exceeded. If the maximum fov is exceeded there may be disturbing loss of definition and/or vignetting at the edge of the image,  $\rightarrow$  following pages!

The eyepiece field of view (fov) designates the diameter of the intermediate image in the eyepiece in mm, i.e. the diameter of the circular diaphragm that frames the image and that lies inside the eyepiece. This fov is specified on the eyepiece after the magnification, e. g. 10x/20. For the Leica DM IRB and Leica DM IRE2 microscope we recommend fov 22.



The maximum eyepiece field of view of a specific configuration is derived from the following microscope data:

Field performance of the objectives
Field performance of the intermediate
module(s)
Tube field number
Condenser properties

The decisive value is always the **smallest**.

For example, if the intermediate modules only permit a field of view of 20 mm, but the objectives and tube 25 mm, only eyepieces up to fov 20 can be used. Eyepieces with fov 25 can lead to vignetting in this case.

The diameter of the **viewable specimen area** is calculated by dividing the diameter of the field of view by the magnification of the objective and the magnification factor of the microscope optics.

Example:

Eyepiece 10x/20

Objective PLAN 4/0.10

Magnification factor of the Leica DM IRB or Leiva DM IRE2 microscope optics 1x

Viewable specimen area

$$\frac{20 \text{ mm}}{4 \text{ x } 1} = \emptyset 5 \text{ mm}$$

The **total magnification** of the microscope is worked out by multiplying the eyepiece magnification with the reproduction ratio of the objective and the magnification factor of the microscope optics.

Example: Eyepiece 10x/20 Objective PLAN 4/0.10 Magnification factor 1x

Total magnification  $10 \times 4 \times 1 = 40 \times$ 

#### Field performance of objectives

The field performance of objectives is not engraved on the objectives. It may vary within the same class, e.g. low objective magnifications may well exhibit slightly higher values than the average values given below:

Objective series max. recommended eyepiece fov

15 20 22 25

Achromats
C PLAN achromats
APO L apochromats
N PLAN planachromats
PL FLUOTAR® semiapochromats
PL APO planapochromats

Fig. 101 Optical outfit

1 N PLAN objective series for brightfield, 2 HC PLAN 10x/20

Grand Grache PLAN 10x/22 Grand Grach



Your Leica agency can supply you with a constantly updated data sheet on all Leica objectives.

#### Eyepiece graticules

Graticules for length measurements and grain and particle measurements

Our product range comprises the following graticules:

- Graticule
   10 mm/100 divisions
  - 0 mm/100 divisions Order no. 506 950
- Graticule 10 mm/100 divisions
- with crosshair Order no. 506 952
- Graticule for standard series and Snyder-Graff method Order no. 566 950
- Graticule ASTM-E-112, grain size determination
   Order no. 566 951
- Graticule with 10 x10 x 0.1 mm grid divisions Order no. 506 954
- Graticule with 10 x10 x1 mm grid divisions
   Order no. 506 955

For calibrating the graticules, we recommend: Incident light stage micrometer

1 mm = 100 divisions Order no. 563 011

### Filter performance data

Filter	Use
Grey/neutral density filter N	Grey (neutral density) filters are used for light attenuation without influencing the colour temperature. The engraved value, e.g. N16, indicates the attenuation value. So N16 means a reduction to 1/16 = 100/16 = 6.25 % transmission.
Green filter, GR, panchromatic	For general contrast enhancement and black-and-white photography.
DLF	Conversion filter (Daylight filter, blue, similar to CB12), for colour photography with daylight film, integrated in filter magazine.
BG38 (blue filter)	Suppresses red for fluorescence (integrated in fluorescence illuminator).
ALF	Artificial light filter for enhancement of colour contrast in colour photography with artificial light films.
BG20	For highlighting red in Polaroid colour photography.
VG9 (green filter)	Enhances contrast in chromosome photography.
CB1.5, CB3	Conversion filter, blue: raises colour temperature with special lamps.
CR1.5	Conversion filter, red: lowers colour temperature, e.g. from 6000 K (colour temperature of an Xe lamp) to 5500 K (colour temperature of daylight film).
BG23	Enhances contrast of the complementary colours blue and red for black-and-white film.

#### Tube performance data

Tube changing is the same as for the upright microscopes.

The tubes are interchangeable.

**Fig. 102** HCI B22, Binocular tube with 45° viewing angle, field of view index up to 22, eyepiece diameter 30 mm for HC PLAN 10x/20 or 22 eyepieces, interpupillary distance setting: 55 – 75 mm

1 Clamp screw, 2 Tube port, 3 Siedentopf binocular part

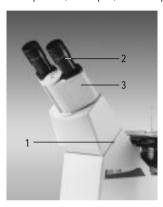


Fig. 103 HCI 3T22, Trinocular tube, 45° viewing angle,

Light path: 100 % vis - switch rod - switch

55 – 75 mm 1 Clamp screw, 2 Tube port, 3 Siedentopf binocular part,



#### Binocular tube HCI B22


The binocular tube consists of a basic part with the tube change ring at the bottom. The tube lens has the factor 1x. The Siedentopf binocular part allows adjustment of the interpupillary distance from 55 mm to 75 mm. The viewing angle is 45°. The tube has adjustable eyepiece tubes for mechanical compensation of the tube length when the interpupillary distance changes. It allows a field of view index of 22.

#### Binocular ergotube HCI BV22

Like HCI B22, but with variable viewing angle of 15°C – 50°C.

**Fig. 104** HCI BV22, ergo binocular tube with  $15^{\circ} - 50^{\circ}$  viewing angle, field of view index up to 22, eyepiece diameter 30 mm for HC PLAN 10x/20 or 22 eyepieces, interpupillary distance setting: 55 - 75 mm

1 Clamp screw, 2 Tube port, 3 Siedentopf binocular part

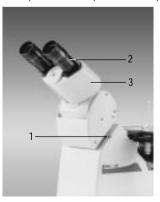

#### Trinocular tube HCI 3T22

The trinocular tube consists of a basic part with the tube change ring at the bottom, the tube lens has the factor 1x. The Siedentopf binocular part allows adjustment of the interpupillary distance from 55 mm to 75 mm. The viewing angle is 45°. The tube has adjustable eyepiece tubes for mechanical compensation of the tube length when the interpupillary distance changes. It allows a field of view index of 22. The documentation port is only operated with HC components.

The tube contains a switchable mirror with three settings:

100 % visual 50 % / 50 % visual/photo 100 % photo

#### Tube adapter R/IR

The tube adapter R/IR enables compatibility of all tubes with viewing angle 30° of the Leica DMR range.

On the Leica DM IRB or Leica DM IRE2 these tubes are only suitable up to 22 fov.

#### HC FSA 25 PR

Binocular observation and photo tube, viewing angle 30°, with back reflection.

Controllable dark flap of the binocular port for photography and microphotometry.

3 clickstop positions of the beamsplitter in the tube:

Switch ro	bc	Observation	Photo
VIS	=	100 %	0 %
50/50		50 %	50 %
PHOTO		0 %	100 %

Back reflection only at the 50 % / 50 % beam-splitter position.

#### HC FSA 25 PE

Binocular observation and photo tube, viewing angle 30°, with provision for optical overlay for documentation of transparencies (slide overlay device) or opaque macro objects (macro device).

3 clickstop positions of the beamsplitter in the tube:

Switch ro	od	Observation	Photo
VIS	=	100 %	0 %
50/50		50 %	50 %
PHOTO		0 %	100 %

#### Condenser performance data

#### Condenser 0.30 S70

Without height adjustment, as the fixed focus concept of this condenser guarantees optimal matching of light and phase rings for liquid levels up to 60 mm. FWD (free working distance) 70 mm. For brightfield (HF), phase contrast (PH, Phaco), transmitted light interference contrast (ICT) and polarisation contrast up to 40x objective magnification in each case. Used without field diaphragm.

#### Condensers 0.53 S23 and 0.90 S1

The condenser has a slide changer, height adjustment and centration facility for setting Koehler illumination. The holder holds the base part of the condenser, which can be fitted with condenser tops 0.53 S23, 0.90 S1 or P 1.40 OIL S1 to suit the particular application.

#### Possible applications of the condensers for the Leica DM IRB

Illumination technique	Condenser 0.30 S70 objective	Diaphragms/ accessories	Condenser 0.53 S23 objective	Diaphragms/ accessories	Condenser 0.90 S1 objective	Diaphragms/ accessories
Brightfield	2.5x - 40x	-	5x – 100x	-	10x − 100x •	_
Phaco	5x 10x, 20x 40x -	PH 0 S70 PH 1 S70 PH 2 S70	5x 10x, 20x 40x, 63x 100x	PH 0 S23 PH 1 S23 PH 2 S23 PH 3 S23	- 10x, 20x 40x, 63x 100x	– PH 1 S1 PH 2 S2 PH 3 S3
Interference contrast	10x - 40x	ICT device.	10x – 100x	ICT device.	10x – 100x ⊗	ICT device.
Pol contrast	2.5x – 40x	Pol device	5x – 100x	Pol device	10x − 100x •	Pol- device
Darkfield	-	-	5x – n. A. 0.40	3 S23 Δ	10x – n. A. 0.75	D S1

- 100 x for maximum resolution also possible with condenser top P 1.40 OIL S1
- Δ Light ring 3 S23 serves as DF diaphragm
- For maximum resolution there is also a condenser top P 1.40 OIL S1

Together with condenser top 0.53 S23, max. FWD 30 mm, culture vessels can be examined microscopically up to liquid levels of 25 mm. For contrasting techniques brightfield (HF), phase contrast (Phaco/PH), transmitted light interference contrast (ICT) and polarisation contrast, objectives with magnifications up to 100x can be used. For transmitted light darkfield we recommend objectives with a numerical aperture up to 0.40.

For condenser top 0. 90 S1, max. FWD 1 mm, thin specimen slides and coverslips must be used as substrates for the specimen. Objectives with a numerical aperture up to 0.75 are suitable for transmitted light darkfield. All other contrasting techniques can be performed up to objective magnification 100x.

#### Condenser disc

All condensers of the Leica DM IRB are equipped with a 6-position disc which can be fitted with an individual choice of annular stops for phase contrast (PH), darkfield (DF) or IC prisms for transmitted light interference contrast (ICT).

# Performance data of stages and mountable object guides

### Plane stage

With hole for insert rings of 20 mm diameter or 40 mm diameter. Holes for inserting specimen clips and two threaded holes on left and right underneath the stage for attachment of the object guide.

### Object guide

Adjustment range: X 127 mm x Y 83 mm

To accommodate holders for different culture vessels. Self-adhesive scales for the holders are enclosed for coordinate adjustment reading. These should be stuck in the countersinks of the object guide.

### 3-plate x/y stage

Adjustment range: X 60 mm x Y 40 mm With hole for insert rings of 20 mm diameter or 40 mm diameter. Holes for inserting specimen clips. Coaxial drive for specimen positioning with universal joint.

# Rotary stage with object guide and frame insert for coverslips

Rotation radius: 360°

Adjustment range of the object guide:

X 40 mm x Y 40 mm

The object guide accommodates specimen slides or the frame insert for coverslips. The minimum size of coverslips that can be secured in the frame insert is 22 mm x 32 mm.

#### **Stages**

#### Plane stage and mountable object guide

The plane stage is secured to the microscope with 3 screws. The object guide can be mounted to either the right or the left of the plane stage.

### 3-plate x/y stage

To attach the stage, 3 screw holes first have to be accessed by moving the stage in x/y direction.

### Rotary stage and frame insert for coverslips

The rotary stage is secured with 3 screws. Move the rotary mount to gain access to all the screw holes. Put the screws in the holes.

n.b. Use washers as well for the holes at the back. Only screw the screws in lightly, as the rotary stage first has to be centred: to do this, insert the centring aid in the rotary stage. Engage the Bertrand lens by turning the knurl and focus with the lever. Move the stage until the bright circle is in the centre of the field of view. Then fix the stage in position, disengage the Bertrand lens and remove the centring aid. To secure specimen slides in frame inserts, press the middle of the leaf spring and slide in the coverslip in the direction of the arrow. Clamp the frame insert in the object guide.

# Performance data of the incident light fluorescence illumination\*

The Leica DM IRB microscope is preferably equipped with mercury or xenon gas discharge lamps for fluorescence applications as they offer higher intensity. However, a 12 V 100 W halogen lamp can be used as well.

#### Lamphousing performance data

### Lamphousing 106\*

Lamphousing 106 is equipped with a 12 V 100 W halogen lamp. The lamp holder is centrable in x and y direction. The aspherical collector can be focused. Lamphousing 106 is fitted with a diffusing disc and heat protection filter, but does not have a reflector.

### Lamphousing 106 z\*

Like lamphousing 106, but additionally with centrable and focusable reflector and 4- to 6-lens collector. A quartz collector is available on request. The following lamps can be used (each have their own holder):

- 12 V/100 W halogen lamp (A.C.)
- Ultra high pressure 50 W Hg lamp (A.C.)
- Ultra high pressure 100 W Hg lamp (D.C. stabilised/non-stabilised)
- Ultra high pressure 100 W Hg lamp (D.C. stabilised/non-stabilised, type 103 W/2)
- High pressure 75 W xenon lamp (D.C. stabilised/non-stabilised).

### Lamphousing 107/2

The shield connection of the lamphousing is screwed to the potential equalisation point of the 12 V 100 W power unit. This lamphousing for transmitted and incident light has a fixed 1-lens collector and a fixed 12 V 100 W lamp.



Lamphousings LH 105 have been replaced by lamphousings LH 106. However, they are compatible with LH 106 lamphousings and can also be used.

Туре	Average life span

12 V	100	W	halogen	lamp	(A.C.)
------	-----	---	---------	------	--------

Hg ultra high pressure lamp 50 W (A.C.)	100 h
Xe high pressure lamp 75 W (D.C., stabilised)	400 h
Hg ultra high pressure lamp 100 W (D.C., stabilised/non-stabilised)	200 h
Hg ultra high pressure lamp 100 W (D.C., stabilised/non-stabilised, type 103 W/2)	300 h

### Lamphousings with order nos.

### Non-centrable lamphousings

	LH 106	LH 107, left	LH 107/2	LH 35/2
6 V/35 W 12 V/100 W, 0.55 m 12 V/100 W, 2.0 m 12 V/100 W, 2.0 m, shielded	504 058 504 059	504086	504 080 504 085	504088

### Centrable lamphousings

	LH 106, rigl 4-lens	nt-hand op. 6-lens	LH 106, left-hand op. 6-lens
12 V/100 W, 0.55 m 12 V/100 W, 2 m 12 V/100 W, 2.9 m	507 070 504 071	504 065	504 087
Hg 100 W, with ZG Hg 100 W, with ZG, 3 m Hg 100 W, without ZG Hg 50 W Xe 75 W	504 068 504 069 504 083	504 062 504 063 504 061	504 090 504 066 504 089

## General technical data

### Microscope

For indoor use only

Mains voltage:  $90 - 250 \text{ V} \sim \text{Frequency}$ : 50 - 60 Hz

Power consumption: DM IRB max. 160 W

Fuses: T4A

Ambient temperature:  $10 - 36 \,^{\circ}\text{C}$ Relative humidity:  $0 - 80 \,^{\circ}\text{U}$  up to 30  $\,^{\circ}\text{C}$ 

Overvoltage category: II

Contamination class: 2

#### Technical data of the Leica CTR MIC

#### Electronics box for the Leica DM IRE2

For indoor use only

Mains voltage: 90-250 V~ Frequency: 50-60 Hz Power consumption: 290 VA

Fuses: T 6,3 A Ambient temperature: 10-36°C

Relative humidity 0-80% up to 30°C
Overvoltage category: II

2

Overvoltage category:
Contamination class:

# Main wearing and spare parts, tools

Order No.		
Part no.	Component	Used for
Spare lamps		
500 974	Halogen lamp 12 V 100 W	Lamphousing 105
500 137	Ultra high pressure Hg lamp 50 W	Lamphousing 106 z
500 138	Ultra high pressure Hg lamp 100 W	Lamphousing 106 z
500 321	Ultra high pressure Hg lamp 100 W	Lamphousing 106 z
	(103 W/2)	
500 139	High pressure xenon lamp 75 W	Lamphousing 106 z
Tools, adjustment keys		
016-500.020-001	Hexagonal screwdriver	Assembly and adjustment
020-434-045	2.5 mm Allen key,	Assembly of heating stage and
	angled, short	illumination mirror
	g,	
Screw cover for unoccupied nose,	piece positions	
020-422.570-000	Screw cover M25	Objective nosepiece
		, ,
Spare eyecups (glare protection) f	or HC PLAN eyepiece	
021-500.017-005	Eyecup HC PLAN	10x/25 eyepiece
021-264.520-018	Eyecup HC PLAN	10x/22 eyepiece
021-264.520-018	Eyecup HC PLAN	10x/20 eyepiece
	J	
Immersion oil, DIN/ISO standard, f	luorescence-free	
513 787	10 ml	OIL and IMM objectives
513 522	100 ml	and oil condenser tops
513 788	500 ml	- · · · · · · · · · · · · · · · · · · ·

# **EU** Declaration of Conformity

We hereby declare that the product specified below conforms in its design and construction as well as the model we have put on the market to the relevant safety and health regulations laid down by the European Union.

This declaration will cease to be valid if the instrument is modified without our consent.

Product name: DM IRB

Instrument type: Light microscope

Instrument no.: 020-525.701 to

020-525.780

EU directives: Low voltage:

73/23/EWG Electromagnetic compatibility: 89/336/EWG

Harmonised EN 50081-1 standards EN 50082-1 applied: EN 61010-1

Wetzlar, 18. 4. 1997

Prof. Dr.-Ing. habil. M. Jaksch, Director of Technology and Development Engineering